00049E/XST COVER 11/21/02 3:53 PM Page 2

DVD PLAYER

DVD-S128
DVD-S228
DVD-S328K
DVD-S428K

AK68-00049E

TH ENG

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 2

1. Setting up

Ensure that the mains supply in your house complies with that indicated on the identification sticker located at the back of your play. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10cm). Make sure the ventilation slots are not covered. Do not stack other, or heavy devices on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player ensure the disc tray is empty.
This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electricity supply In order to separate the player completely from the mains,it has to be disconnected by unplugging the main plug, especially when left unused for a long period of time.

2. Caution

Protect the player from moisture (dripping or splashing and objects filled with liquids), and excess heat (e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the mains electricity supply if the player malfunctions. Your player is not intended for industrial use but for domestic purposes only. Use of this product is for personal use only. If your player or disc has been stored in a cold atmosphere for example during transportation in the winter, wait for approximately 2 hours until they have reached room temperature, before use.

3. For your safety

Never open the player or any of its components. It can be dangerous for you or certain fragile components. You could receive an electric shock or touch the laser beam. Do not place your eyes close to the opening of the disc tray or any other opening to look inside the player.

4. Disc

Be careful handle your discs with care. Hold a disc with finger on the border or hole. Always place disc with the label facing upward (in case of a single side disc). Always use a soft cloth to clean disc if necessary, wipe from the centre to the border. Always put disc back into their cases after playing and store in vertical position. Always place the disc properly into the tray using the proper guide area. Never use record cleaning sprays, benzine, static electricity liquids or any other solvent, if the disc surface is dirty. Wipe gently with a soft damp (water only) cloth, never wipe the disc in a circular motion, since circular scratches are likely to occur and could cause noise during playback.

5. Battery

The battery used in this product contains chemicals that are harmful to the environment.
Do not dispose of batteries in the general household waster. It is recommended that the replacement of the battery should be done by a technician.

6. Maintenance of cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.
- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

1

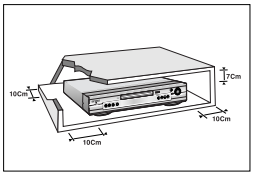

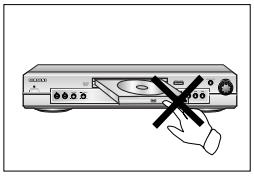

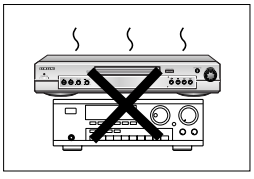

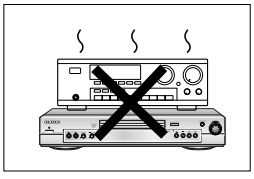

2

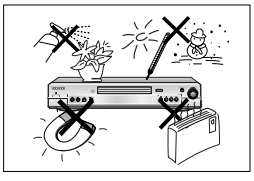

3

4

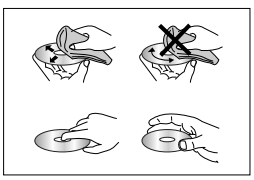

5

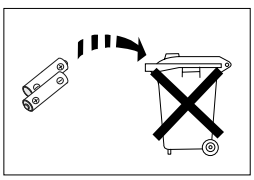

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 4

Before You Start

Accessories

Remote Control

Batteries for Remote Control (AA Size)



User's Manual

Video / Audio Cable

Install Batteries in the Remote

1. Open the battery cover on the back of the remote.
2. Insert two AA batteries. Make sure that the polarities (+ and -) are aligned correctly.
3. Replace the battery cover.

If remote doesn't operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

TABLE OF CONTENTS

General Features 6
Disc Type and Characteristics 7
Description-Front Panel 8
Display Indicators 10
Description-Rear Panel 11
Tour of the Remote Control 14

Choosing a Connection 20

Playing a Disc 22
Using the Search & Skip Functions 24
Using the Display Function 25
Repeat Play 26
Program Play & Random Play 27

S.FIT Play 28
Digest Play 29
Using the Disc View Function 30
Slow Repeat play 31
Selecting the Audio Language 32
Selecting the Subtitle Language 33
Changing the Camera Angle 34
Using the Instant Replay Function 35
Using the Bookmark Function 36
Using the Zoom & 3D Sound Functions 37
MP3 Play 38

Beginning Karaoke Functions 40
Reserving a Song 41
Vocal Function 42

Using the Setup Menu 43
Setting Up the Language Features 44
Setting Up the Parental Control 46
Setting Up the Audio Options 47
Surround Sound Speaker Setup 48
Setting Up the Display Options 49

Controlling a TV with the Remote 50
Troubleshooting 51
Specifications 52

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 6

General Features

Excellent Sound
Dolby Digital, a technology developed by Dolby Laboratories provides crystal clear sound reproduction.

Screen
Video with MPEG-2 compression technology. Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion
An important scene can be viewed in slow motion.

Programmed Play
You can program tracks to play in desired order.

Parental Control
The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions
You can select various languages(Audio/Subtitle) and screen angles while enjoying movies.

Repeat
You can repeat a song or movie simply by pressing the REPEAT button.

MP3
This unit can play discs created from MP3 files.

Instant Replay
This function is used to replay the previous 10 seconds of the movie from the current position.

NOTE

* Discs which cannot be played with this player:
  - DVD-ROM
  - DVD-RAM
  - CD-ROM
  - CDV
  - CDI
  - HD layer of super Audio CD
  - CDGs play audio only, not graphics.
* Ability to play back may depend on recording conditions:
  - DVD-R
  - CD-RW
  - DVD+RW, -RW

COPY PROTECTION

- **Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.**
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos:

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
DVD	Audio + Video	12 Cm	Single-sided 240 min. Double-sided 480 min.	• DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. • Various screen and audio functions can be easily selected through the on-screen menu.
		8 Cm	Single-sided 80 min. Double-sided 160 min.	
VIDEO-CD	Audio + Video	12 Cm	74 min.	• Video with CD sound, VHS quality & MPEG-1 compression technology.
		8 Cm	20 min.	
AUDIO-CD	Audio	12 Cm	74 min.	• CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
		8 Cm	20 min.	

Disc Markings

- Play Region Number
- PAL broadcast system in U.K, France, Germany, etc.
- Dolby Digital disc
- Stereo disc
- Digital Audio disc
- DTS disc
- MP3 disc

Play Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is described on the rear panel of the player.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 8

DVD-S128/DVD-S228

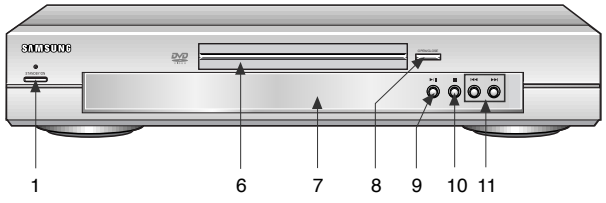

DVD-S328K

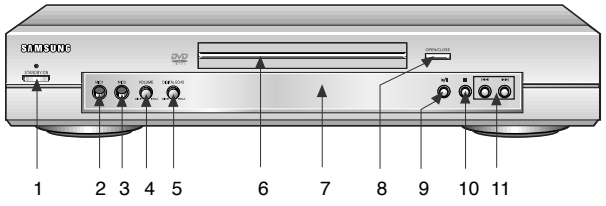

DVD-S428K

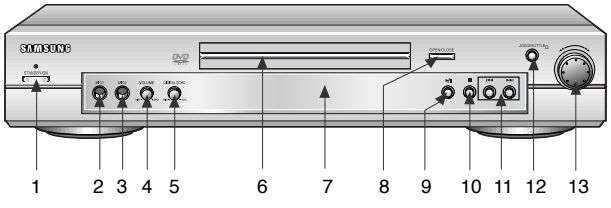

Front Panel Controls

1. STANDBY / ON
- When the unit is first plugged in, the indicator lights. When STANDBY/ON is pressed on again, the light goes out and the player is turned on.

2. MIC 1
- Connect microphone 1 for Karaoke functions.

3. MIC 2
- Connect microphone 2 for Karaoke functions.

4. VOLUME
- Use to adjust microphone volume level.

5. DIGITAL ECHO
- Use to adjust echo delay.

6. DISC TRAY
- Load the disc here.

7. DISPLAY
- Operation indicators are displayed here.

8. OPEN/CLOSE
- Press to open and close the disc tray.

9. PLAY/PAUSE
- Begin or pause disc play.

10. STOP
- Stops disc play.

11. SKIP
- Use to skip a scene or music.

12. JOG
- Use to access certain Shuttle features with the Shuttle dial : When JOG is pressed, indicator lights up.

13. SHUTTLE
- Use during DVD and CD play to fast forward or reverse. In JOG mode(JOG button pressed), used for frame advance/CD track selection.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 10

Display Indicators

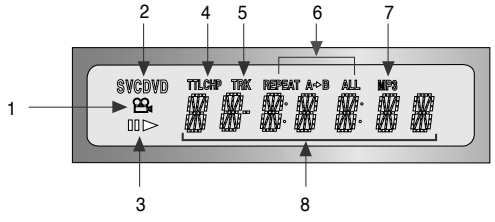

Front Panel Display

1. Angle indicator. You can select multiple angles of a scene recorded by different cameras.
2. Disc type indicators
3. Play / Pause / Forward play
4. DVD : Title, Chapter number.
5. Video/Audio CD : Track number
6. Repeat play mode
7. MP3 indicators
8. Displays various messages concerning operations such as PLAY, STOP, LOAD, ...
   no DISC : No disc loaded.
   OPEN : The disc tray is open.
   LOAD : Player is loading disc information.

Description-Rear Panel

DVD-S128/DVD-S228

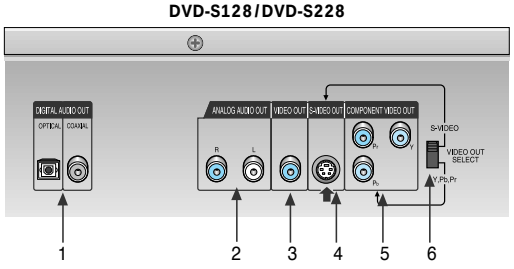

Rear Panel

1. DIGITAL AUDIO OUT JACKS
- Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.

2. ANALOG AUDIO OUT JACKS
- Connect to the Audio input jacks of your television, audio/video receiver, or VCR.

3. VIDEO OUT JACKS
- Use a video cable to connect to the Video input jack on your television.

4. S-VIDEO OUT JACK
- Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. The S-Video must be selected in the VIDEO OUT SELECT.

5. COMPONENT VIDEO OUT JACKS
- Use these jacks if you have a TV with Component Video in jacks. These jacks provide Pr, Pb and Y video. Along with S-Video, Component Video provides the best picture quality. The Y, Pb, Pr must be selected in the VIDEO OUT SELECT.

6. VIDEO OUT SELECT SWITCH
- Use the switch to set video out. If Y, Pb, Pr is selected, S-Video may not work. If S-Video is selected, Y, Pb, Pr may not work.

NOTE

* Select the VIDEO OUT SELECT switch in the Stop or Power Off mode.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 12

DVD-S328K

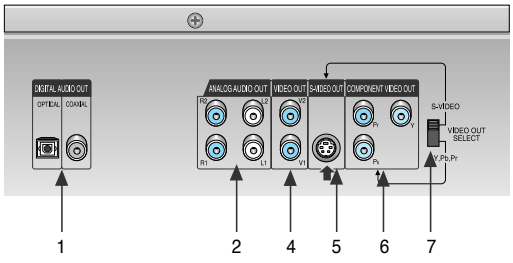

DVD-S428K

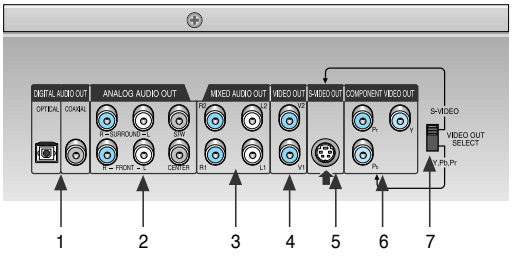

Rear Panel

1. DIGITAL AUDIO OUT JACKS
- Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.

2. ANALOG AUDIO OUT JACKS
- Connect to the Audio input jacks of your television, audio/video receiver, or VCR.

3. MIXED AUDIO OUT JACKS
- Connect to the Audio input jacks of your television, audio/video receiver, or VCR.

4. VIDEO OUT JACKS
- Use a video cable to connect to the Video input jack on your television.

5. S-VIDEO OUT JACK
- Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. The S-Video must be selected in the VIDEO OUT SELECT.

6. COMPONENT VIDEO OUT JACKS
- Use these jacks if you have a TV with Component Video in jacks. These jacks provide Pr, Pb and Y video. Along with S-Video, Component Video provides the best picture quality. The Y, Pb, Pr must be selected in the VIDEO OUT SELECT.

7. VIDEO OUT SELECT SWITCH
- Use the switch to set video out.
- If Y, Pb or Pr is selected, S-Video will not work.
- If S-Video is selected, Y, Pb or Pr will not work.

NOTE

* Select the VIDEO OUT SELECT switch in the Stop or Power Off mode.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 14

DVD-S128/DVD-S228

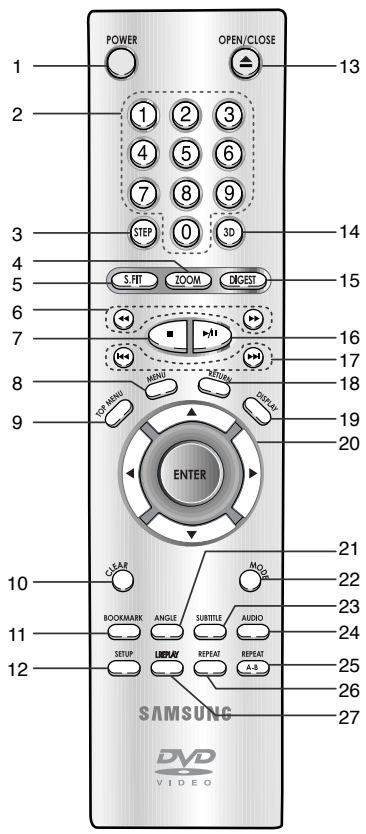

DVD Function Buttons

1. DVD POWER Button

2. NUMBER Buttons

3. STEP Button
- Advances play one frame at a time.

4. ZOOM Button

5. S.FIT Button

6. SEARCH Buttons
- Allows you to search forward/backward through a disc.

7. STOP Button

8. MENU Button
- Brings up the Disc menu.

9. TOP MENU Button

10. CLEAR Button
- Use to remove menus or status displays from the screen.

11. BOOKMARK Button

12. SETUP Button
- Brings up the DVD player's Setup menu.

13. OPEN/CLOSE Button

14. 3D Button

15. DIGEST Button

16. PLAY/PAUSE Button
- Begin/Pause disc play.

17. SKIP Buttons
- Use to skip the title, chapter, or track.

18. RETURN Button
- Returns to a previous menu.

19. DISPLAY Button
- Displays the current disc mode.

20. ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Buttons)
- This button functions as a toggle switch.

21. ANGLE Button
- Use to access various camera angles on a DVD.

22. MODE Button
- Allows you to program a specific order.

23. SUBTITLE Button

24. AUDIO Button
- Use this button to access various audio functions on a disc.

25. REPEAT A-B Button
- Use to mark a segment to repeat between A and B.

26. REPEAT Button
- Allows you to repeat play a title, chapter, track, or disc.

27. I.REPLAY Button
- This function is used to replay the previous 10 seconds of the movie from the current position.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 16

DVD-S328K

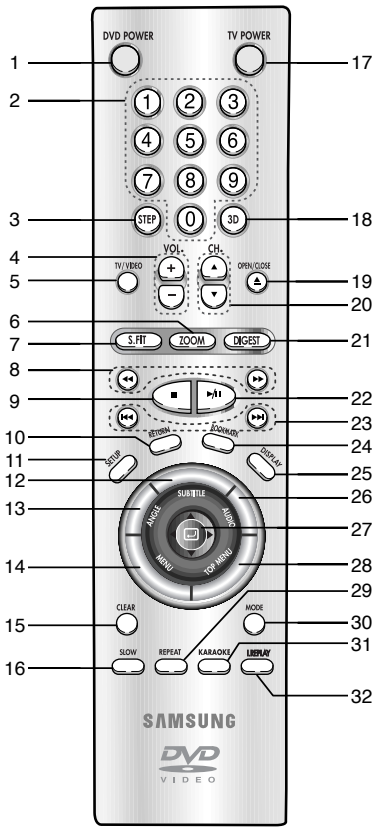

DVD Function Buttons

1. DVD POWER Button

2. NUMBER Buttons

3. STEP Button

4. VOLUME Buttons

5. TV/VIDEO Button

6. ZOOM Button

7. S.FIT Button

8. SEARCH Buttons
- Allows you to search forward/backward through a disc.

9. STOP Button

10. RETURN Button
- Returns to a previous menu.

11. SETUP Button
- Brings up the DVD player's Setup menu.

12. SUBTITLE Button

13. ANGLE Button
- Use to access various camera angles on a DVD.

14. MENU Button
- Brings up the Disc menu.

15. CLEAR Button
- Use to remove menus or status displays from the screen.

16. SLOW Button

17. TV POWER Button

18. 3D Button

19. OPEN/CLOSE Button

20. CHANNEL Buttons

21. DIGEST Button

22. PLAY/PAUSE Button
- Begin/Pause disc play.

23. SKIP Buttons
- Use to skip the title, chapter, or track.

24. BOOKMARK Button

25. DISPLAY Button
- Displays the current disc mode.

26. AUDIO Button
- Use this button to access various audio functions on a disc.

27. ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Button)
- This button functions as a toggle switch.

28. TOP MENU Button

29. REPEAT Button
- Allows you to repeat play a title, chapter, track, or disc.

30. MODE Button
- Allows you to program a specific order.

31. KARAOKE Button
- Use to begin Karaoke functions.

32. I.REPLAY Button
- This function is used to replay the previous 10 seconds of the movie from the current position.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 18

DVD-S428K

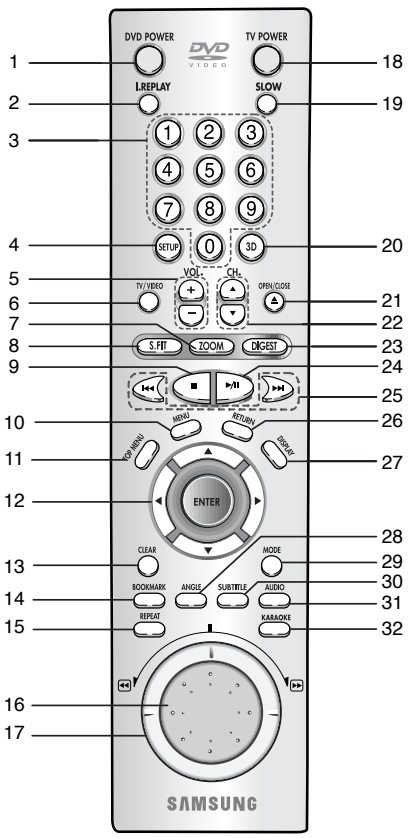

DVD Function Buttons

1. DVD POWER Button

2. I.REPLAY Button
- This function is used to replay the previous 10 seconds of the movie from the current position.

3. NUMBER Buttons

4. SETUP Button
- Brings up the DVD player's Setup menu.

5. VOLUME Buttons

6. TV/VIDEO Button

7. ZOOM Button

8. S.FIT Button

9. STOP Button

10. MENU Button
- Brings up the Disc menu.

11. TOP MENU Button

12. ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT buttons)
- This button functions as a toggle switch.

13. CLEAR Button
- Use to remove menus or status displays from the screen.

14. BOOKMARK Button

15. REPEAT Button
- Allows you to repeat play a title, chapter, track, or disc.

16. JOG DIAL
- Operates frame by frame play. In CD mode, performs track search.

17. SHUTTLE DIAL
- Performs fast or slow motion play.

18. TV POWER Button

19. SLOW Button

20. 3D Button

21. OPEN/CLOSE Button

22. CHANNEL Buttons

23. DIGEST Button

24. PLAY/PAUSE Button
- Begin/Pause disc play.

25. SKIP Buttons
- Use to skip the title, chapter, or track.

26. RETURN Button
- Returns to a previous menu.

27. DISPLAY Button
- Displays the current disc mode.

28. ANGLE Button
- Use to access various camera angles on a DVD.

29. MODE Button
- Allows you to program a specific order.

30. SUBTITLE Button

31. AUDIO Button
- Use this button to access various audio functions on a disc.

32. KARAOKE Button
- Use to begin Karaoke functions.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 20

The following show examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the owner's manual of the additional components you are connecting for more information on those particular components.

Connection to an Audio System

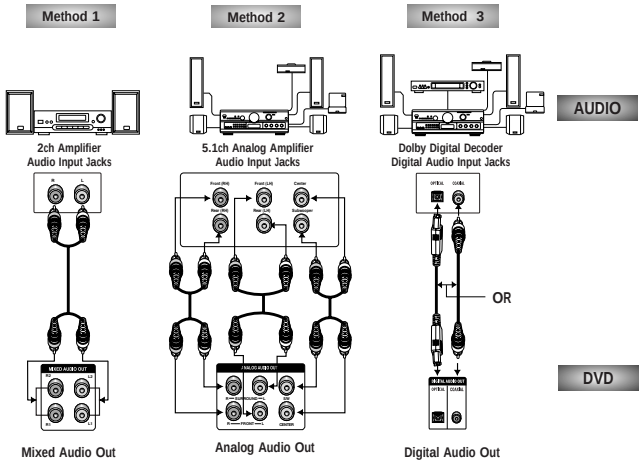

Connection to a TV (For Video)

TV (Normal, Widescreen, Projection, etc..)

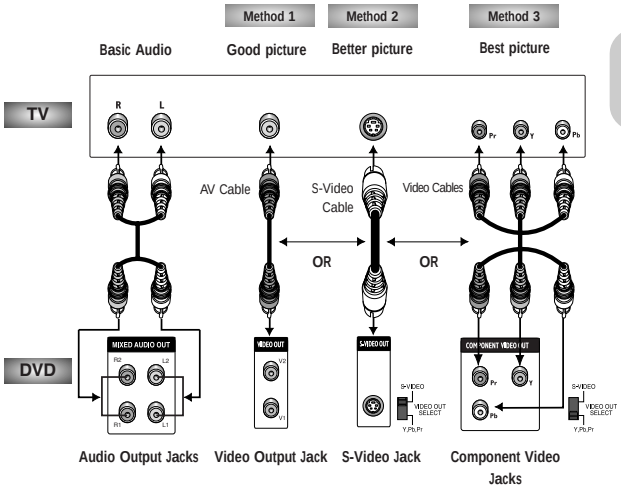

- **Method 1** DVD Player + TV with Video Input Jack
- **Method 2** DVD Player + TV with S-Video Input Jack
  (If S-Video is selected in the VIDEO OUT SELECT.)
- **Method 3** DVD Player + TV with Component Video Jacks
  (If Y, Pb or Pr is selected in the VIDEO OUT SELECT.)

NOTE

- If Y, Pb or Pr is selected, S-Video will not work.
- If S-Video is selected, Y, Pb or Pr will not work.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 22

Before Play

- Turn on your TV and press the TV/VIDEO button to select the video mode.
- Turn on your Audio System and select AUX, CD or DVD.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :

If you want to select the language, press a NUMBER button. (This screen will only appear the very first time you plug in the player.)

Play

1 Press the OPEN/CLOSE button.
The STANDBY indicator light goes out and the tray opens.

2 Place a disc gently into the tray with the disc's label facing up.

3 Press the PLAY/PAUSE button or OPEN/CLOSE button to close the disc tray.

4 Stopping Play
Press the STOP button during play.

5 Removing Disc
Press the OPEN/CLOSE button.

6 Pausing Play
Press the PLAY/PAUSE or STEP button on the remote during play.
- Screen stops, no sound.
- To resume again, press PLAY/PAUSE button once again.

7 Step Motion Play. (Except CD)
DVD-S428K : If turning JOG DIAL, you can view one by one.
DVD-S128/DVD-S228/DVD-S328K : Press the STEP button on the remote during play.
- Each time the button is pressed, a new frame will appear.
- No sound is heard during STEP mode.
- Press PLAY/PAUSE to resume normal play.
(You can only perform step motion play in the forward direction.)

8 Slow Motion Play. (Except CD)
DVD-S128/DVD-S228/DVD-S328K : Press the FWD SEARCH (▶▶) or REV SEARCH (◀◀) button on the remote during PAUSE or STEP mode. By pressing the FWD SEARCH (▶▶) or REV SEARCH (◀◀) button, you can select slow motion play for 1/8, 1/4 or 1/2 of normal speed.
DVD-S428K : Press and hold the SKIP button to choose the play speed between 1/8, 1/4, and 1/2 of normal.
- No sound is heard during slow mode.
- Press PLAY/PAUSE to resume normal play.
- When playing a VCD, the reverse slow motion play will not work.

BASIC FUNCTIONS

RESUME function

When you stop disc play, the player remembers where you stopped, so when you press PLAY again, it will pick up where you left off (unless the disc is removed, the STOP button is pressed twice or the player is unplugged.).

NOTE

- If the player is left for 5 minutes in pause mode, it will stop.
- If the player is left in the stop mode for more than 30 minutes, the power will automatically shut off. (Automatic Power-Off Function) (DVD-S128, DVD-S228 only)
- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated, and the TV screen will fade in and out repeatedly. Press the PLAY button to resume normal play.
- This ⊘ icon indicates an invalid button press.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 24

Using the Search & Skip Functions

During play, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

Searching through a Chapter or Track

1 **DVD-S128/DVD-S228/DVD-S328K :** Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed on the DVD, VCD, CD.

DVD-S428K : Turn the shuttle diad of remote control during disc play. Turn the Jog/Shuttle on the front can amultiple-speed operation if desiring to use the key on the front.

DVD	2X, 4X, 8X, 16X, 32X, 128X
VCD	4X, 8X
CD	2X, 4X, 8X

• Depending on the disc, audio may not be heard when a disc is in 2X play mode.

Skipping Tracks

1 During play, press the NEXT SKIP or BACK SKIP button.

- When playing a DVD, if you press the NEXT SKIP button, it moves to the next chapter. If you press the BACK SKIP button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD 2.0 in MENU OFF mode, a VCD 1.1 or a CD, if you press the NEXT SKIP button, it moves to the next track. If you press the BACK SKIP button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the NEXT SKIP button, it moves forward 5 minutes. If you press the BACK SKIP button, it moves backward 5 minutes.
- When playing a VCD 2.0 in the MENU OFF or Track View function, if you press the NEXT SKIP button, it moves to the next MENU or the next Track View display.

  If you press the BACK SKIP button, it moves to the previous MENU or the previous Track View display. (See page 30.)

Using the Display Function

When Playing a DVD

1 During play, press the DISPLAY button on the remote.

- Current title, chapter number, elapsed time, audio, subtitle and volume control will be displayed.
- Use the NUMBER buttons to enter a different title, then press the ENTER button.
- Use the LEFT/RIGHT or NUMBER buttons to enter a chapter number, then press the ENTER button.
- To enter the time from which you want to start, use the UP/DOWN buttons to select, then use the NUMBER buttons to enter the time. Then press the ENTER button.
- Use the LEFT/RIGHT buttons to change the values of the current audio, subtitle and volume.
- To make the screen disappear, press the DISPLAY button again.

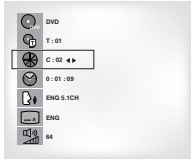

When Playing a CD/VCD

1 During play, press the DISPLAY button on the remote.

- Current track NUMBER, elapsed time and volume control will be displayed.
- Use the UP/DOWN buttons to select a track. Use the LEFT/RIGHT buttons or NUMBER buttons to enter a different track number, then press the ENTER button.
- To enter the time from which you want to start, use the UP/DOWN buttons to select, then use the NUMBER buttons to enter the time. Press the ENTER button.
- To change the value of the volume, use the LEFT/RIGHT buttons.

- To make the screen disappear, press the DISPLAY button again.

* In VCD 2.0 mode (MENU ON mode), only the volume control will appear on screen.

VCD

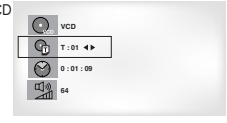

CD

NOTE

What is a Chapter?
Each Title on a DVD is usually divided into chapters (similar to tracks on an audio CD).

What is a Title?
A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 26

Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD

1 Press the REPEAT button on the remote. Repeat screen appears.

2 Select Chapter, Title or A-B using the LEFT/RIGHT buttons.

- Repeat A-B
  - Press the REPEAT button. Select A-B on screen with the LEFT/RIGHT buttons or press the A-B button on the remote.
  - Press ENTER at the point where you want the repeat play to start (A). The B is automatically highlighted.
  - Press ENTER at the point where you want the repeat play to stop (B).

3 Press ENTER.

4 To return to normal play, press REPEAT again, then press the LEFT/RIGHT buttons to select Off and press ENTER.

DVD

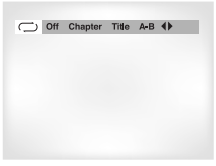

VCD/CD

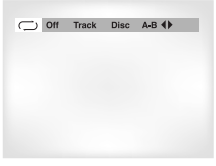

NOTE

- DVD repeats play by chapter or title, CD and VCD repeat play by disc or track. See page 38 to MP3 disc repeat play.
- Depending on the disc, the Repeat function may not work.
- If the title or track is completed before marking the end (B), the end of title or track becomes B automatically.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.

Program Play & Random Play

Program Play (DVD/VCD/CD/MP3)

1 Press the MODE button.

2 Use the LEFT/RIGHT buttons to select PROGRAM. Press the ENTER button.

3 Use the LEFT/RIGHT buttons to select the first chapter (or track) to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.

4 Press the PLAY/PAUSE button. The disc will be played in programmed order.

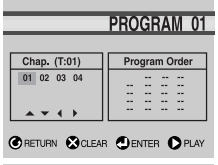

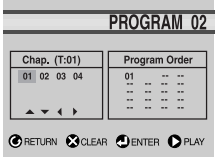

Random Play (DVD/VCD/CD/MP3)

1 Press the MODE button.

2 Use the LEFT/RIGHT buttons to select RANDOM. Press the ENTER button.
The disc will be played in random order.

NOTE

- Depending on the disc, the Program and Random Play function may not work.
- When in VCD 2.0 mode (MENU ON mode), these functions do not work.
- To resume normal play, press the CLEAR button.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng2 11/21/02 3:45 PM Page 28

S.FIT Play

Screen Fit Play

1 During play, press S.FIT button on remote control.

- Allows you to eliminate the black bars in the top and bottom of the screen when a movie is playing in the Widescreen format(16:9).
- Screen Fit will not work when the Zoom mode is active. (you can not remove the black bars on the screen) However, Zoom mode will work when Screen Fit is active.

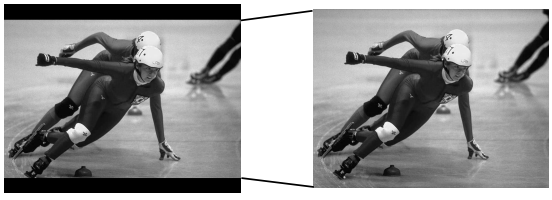

NOTE

- Various aspect ratios are available only in multiple screen format discs.
- This function does not work when a DVD has been recorded with a multi-camera angle format.
- On some DVDs, the black bars cannot be eliminated due to their aspect ratio.

Digest Play

Digest Play

1 During play, press the DIGEST button.

- You'll see the 9 individual windows representing each of the chapters on the TV screen.
- When each window is displayed, the first 3 seconds of the chapter will be played.

SKIP button

2 Press UP/DOWN/LEFT/RIGHT buttons or NUMBER buttons to select the window you'd like to see, and press the ENTER button.

- Up to 9 windows(chapters) can be displayed on the screen at a time.
- Press the 'Skip' button for the next 9 chapters if the movie has more than 9.

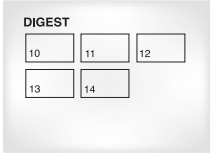

NOTE

- You can play the DVD player starting with the desired chapter after directly moving to the scene you want.
- 'DIGEST' may not operate depending on the disc in use.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:46 PM Page 30

Using the Disc View Function

Track View (VCD)

Displays the beginning view of each track and the track number.

1 During play, press the TOP MENU button.

2 Press the UP/DOWN buttons to select TRACK VIEW. Press the ENTER button.

3 Select the desired view by pressing the UP/DOWN or LEFT/RIGHT buttons.
- Press the SKIP button for the next 9 tracks if the movie has more than 9.

4 Press the ENTER button.

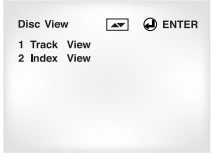

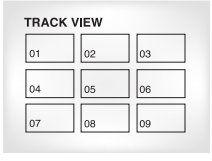

Index View (VCD)

Displays the equally divided 9 views of the current playing track.

1 During play, press the TOP MENU button.

2 Press UP/DOWN buttons to select INDEX VIEW. Press the ENTER button.

3 Select the desired view by pressing UP/DOWN or LEFT/RIGHT buttons.

4 Press the ENTER button.

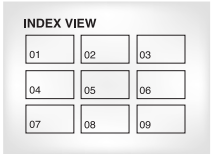

NOTE

- When pressing the TOP MENU button with a DVD; the disc's TITLE MENU function comes up. A disc must have at least two titles for the TITLE MENU function to work.
- When pressing the TOP MENU button with a CD; the unit enters the INTRO mode. INTRO lets you listen to the beginning of each track for about 10 seconds.
- You can also operate it using the DIGEST button.

Slow Repeat play

This feature allows you slowly repeat scenes containing sports, dancing, musical instruments being played etc. so you can study them more closely.

When playing a DVD

1 Press the PLAY/PAUSE button.

2 Press and hold the SKIP button to choose the play speed between 1/8X, 1/4X, and 1/2X of normal. (DVD-S428K only)
Press the FORWARD SEARCH button to choose the play speed between 1/8X, 1/4X, and 1/2X of normal. (DVD-S128/DVD-S228/DVD-S328K only)

3 Press the "REPEAT A-B" of the remote control once at the first section to repeat while the multiple-speed is selected (A-point selection).

4 Press the "REPEAT A-B" button again (B-point selection).

NOTE

- The disc will play from A to B repeatedly at the speed you chose.
- To terminate the function, press the 'CLEAR' button or the 'REPEAT (A-B)' button again. Then press play to resume normal playback.
- A-B REPEAT does not allow you to set point (B) until at least 5 seconds has elapsed after point (A) has been set.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:46 PM Page 32

Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.

Using the AUDIO button

1 Press the AUDIO button.

2 Use the UP/DOWN buttons to select the desired language on a DVD.
- The audio languages are represented by abbreviations.

3 Use the UP/DOWN buttons to select Stereo, Right or Left. (On VCD/CD)

DVD

VCD/CD

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play a DVD;**
Refer to "Setting Up the Language Features" on page 45.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE button.

Using the SUBTITLE button

1 Press the SUBTITLE button.

2 Use the UP/DOWN buttons to select the desired subtitle language.

3 Use the LEFT/RIGHT buttons to determine whether or not the subtitle will be displayed.
- Initially, the subtitling will not appear on screen.
- The subtitle languages are represented by abbreviations.





NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- **How to have the same subtitle language come up whenever you play a DVD;**
Refer to "Setting Up the Language Features" on page 45.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:46 PM Page 34

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can select the Angle function.

Using the ANGLE button

Press the ANGLE button to see if an ANGLE ( ) mark is present at the upper right hand corner of the screen.

1. When an ANGLE mark is shown, press the ANGLE button, then an ANGLE select icon will appear at the upper left hand corner of the screen.
2. Use the UP/DOWN buttons to select the desired screen angle.
3. To turn off the display, press the ANGLE button again.

Using the Instant Replay Function

Using the Instant Replay function (DVD)

If you miss a scene, you can see it again using this function.

1. If you press the I.REPLAY button, the current scene moves backward about 10 seconds, and plays back.

* Depending on the disc, the Instant Replay function may not work.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 36

Using the Bookmark Function

The Bookmark function lets you select parts of a DVD or VCD (MENU OFF mode) so that you can quickly find the section at a later time.

Using the Bookmark Function (DVD/VCD)

1. During play, press the BOOKMARK button on the remote. The Bookmark icons will be displayed.
2. Use the LEFT/RIGHT buttons to move to the desired bookmark icon.
3. When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).
4. Press the BOOKMARK button to turn off the display.

Recalling a Marked Scene

1. During play, press the BOOKMARK button on the remote.
2. Use the LEFT/RIGHT buttons to select a marked scene.
3. Press the PLAY/PAUSE button to skip to the marked scene.

Clearing a Bookmark

1. During play, press the BOOKMARK button on the remote.
2. Use the LEFT/RIGHT buttons to select the bookmark number you want to delete.
3. Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn off display.

NOTE

- Up to three scenes may be marked at a time.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.
- Depending on the disc, the Bookmark function may not work.

Using the Zoom & 3D Sound Functions

Using the Zoom Function (DVD/VCD)

1. During play or pause mode, press the ZOOM button on the remote. A square will be displayed on screen.
2. Use the UP/DOWN or LEFT/RIGHT button to select the part of the screen you want to zoom in on.
3. Press the ENTER button.
   - During DVD play, press ENTER to zoom in 2X/4X/2X/Normal in order.
   - During VCD play, press ENTER to zoom in 2X/normal in order.

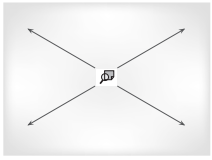

Using the 3D Sound Function

The simulated surround effect depends on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect. This feature is useful when you are using the DVD player with a two channel stereo through the analog outputs. (Discs which are recorded with LPCM or DTS will not work. When the DIGITAL OUTPUT or MPEG-2 is set to BITSTREAM in the SETUP MENU, the 3D Sound function will not work.)

1. During play, press the 3D button. The 3D SOUND mark will be displayed on screen. (Be sure the DIGITAL OUTPUT is set to PCM.)
2. Press the UP/DOWN buttons to turn the 3D Sound feature on or off.

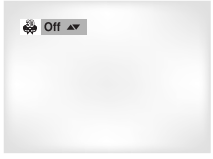

NOTE

- 3D Sound is possible only on discs recorded using DOLBY SURROUND or DOLBY DIGITAL. However, some of these discs do not contain rear channel sound signals.
- Depending on the disc, the Zoom and 3D Sound function may not work.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 38

When an MP3 Disc is inserted into the DVD PLAYER, the first song file of the first folder plays.

MP3 Play Function

1 Press STOP to stop playback of the first song file, then press RETURN to display the music folder menu on the right side of the screen. Up to 8 music folders can be displayed at a time. If you have more than 8 folders on a disc, press the LEFT/RIGHT buttons to bring them up on the screen.

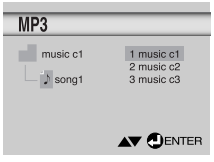

2 Use the UP/DOWN buttons to select the desired music folder, the press ENTER. Use the UP/DOWN buttons again to select a song file. Press ENTER to begin playback of the song file.

Program/Random playback

Press the MODE button to switch between the RANDOM and PROGRAM modes. See page 27 for more information on these modes.

NOTE

- Press the REPEAT button to hear a song file repeatedly. Press Repeat again to release the Repeat mode.

CD-R/MP3 disc requirements

When playing CD-R/MP3 discs, please follow the recommendations below:

- **Your MP3 files should be ISO 9660 or JOLIET format.**
  ISO 9660 format and Joliet MP3 files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. These two formats are the most widely used.
- **When naming your MP3 files do not exceed 8 characters, and place ".mp3" as the file extension.**
  General name format of: Title.mp3. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (.,/,\,=,+).
- **Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.**
  Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate (conversion to MP3 format) of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality.
  Conversely, files with sampling rates below 128 Kbps will not be played properly.
- **Do not try recording copyright protected MP3 files.**
  Certain "securized" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.
- **Your DVD player only accepts one level of file directory.**
  Consequently you must choose:
  -either to save all your MP3 recording files at the root of the disc;
  -and/or create folders in the directory for each artist or music type (e.g.classical, rock, jazz, etc)
- **Important:** The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality.
  You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 40

Beginning Karaoke Functions
(DVD-S328K/DVD-S428K only)

Operation Sequence

1 Connect the Mixed Audio Out terminals with the TV or AMP.

2 Press the power button.

3 Connect Mic into Mic 1 or Mic 2 jack. Then the karaoke mode is transferred to ON mode.

- To disconnect the Mic makes the karaoke mode transfer to OFF mode automatically.

Key Control

1 Pressing the KARAOKE button makes the karaoke ON mode.

2 Select the "KEYCON" using the LEFT/RIGHT buttons.

3 By use of the LEFT/RIGHT buttons, change to the desired tone.

♭ : To let 7 scales down by half scale.

♮ : Original scale.

♯ : To let 7 scales up by half scale.

NOTE

- Key control function is not applied to the Mic output.
- If you hear strange noises(squealing or howling) while using the karaoke feature, move the microphone away from the speakers. Turning down the microphone volume or the speaker volume is also effective.
- MIC does not operate when KARAOKE is in OFF mode.
- The next music plays if performing SEARCH with SCORE displayed in the SCORE ON MODE for CD or VCD.
- When playing MP3 disc, MIC & Karaoke functions are not operate.

Reserving a Song
(DVD-S328K/DVD-S428K only)

It is the function to reserve the desired song in advance by use of Karaoke function

Sequence of reservation

1 Playback the Karaoke Disc containing the wanted songs.

2 After pushing the KARAOKE button of the remote transfer to the Karaoke ON mode using the UP/DOWN buttons.

3 Select the "REQUEST" using the LEFT/RIGHT buttons.

4 Input the number (Track No.) of the desired song into the flickering part(--).

- You can reserve up to 10 songs.

5 When you want the next reserved song during playing a song, press the SKIP button.

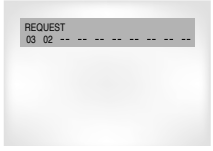

Cancellation of reservation

1 Cancel by pressing the CLEAR button of the remote.

- The last reserved song will be erased first.

2 Continuous pressing of the CLEAR button can cancel the next reserved song.

3 If the reservation is required again, input the song number in the flickering part.

NOTE

- Request function is available only when the Karaoke mode is "ON".
- When using "SKIP" button, it can not work at the last song.
- When using Request function, the "DISPLAY" and "REPEAT" function does not work.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 42

Vocal Function
(DVD-S328K/DVD-S428K only)

Sequence of reservation

1 Pressing the KARAOKE button twice displays the following in Karaoke ON mode:



Vocal Fader

– The function to make the music only sound by cancelling vocal when playing a Karaoke disc.

	VOCAL FADER	Remark
↓	V1	CH1. Vocal Cancel
↓	V2	CH2. Vocal Cancel
↓	1 + 2	CH1, CH2. Vocal Cancel
↓	OFF	Vocal Fader Off

– In VCD, CVD or CD, you can select only the ON or OFF.

Guide Melody

– To guide melody through xylophone and piano help you sing easily.
– This function works only on the DVD Karaoke disc on which the guide melody is recorded.

Score Function

Press KARAOKE button twice to turn the Score Mode On.
- Score will pop up whenever a song is completed.

CAUTIONS

- Make sure to turn the KARAOKE MODE to OFF to play a movie disc or play in a general mode. If you play a movie disc with the SCORE ON, a score will show up every time when a chapter is over.

Types of Karaoke disc

• DVD Karaoke Disc

Channel	Karaoke -Channel	5CH. DVD	2CH. DVD
1 CH	L	Left stereo music	Left stereo music + Vocal
2 CH	R	Right stereo music	Right stereo music + Vocal
3 CH	M	Guide melody	-
4 CH	V1	Vocal track	-
5 CH	V2	Vocal track	-

• CVD, VCD Karaoke Disc

Channel	Karaoke -Channel	CVD	VCD, CD
1 CH	CH1 LEFT	Left stereo music + Vocal	Left stereo music
1 CH	CH1 RIGHT	Right stereo music + Vocal	Right stereo music + Vocal
2 CH	CH2 LEFT	Left stereo music	-
2 CH	CH2 RIGHT	Right stereo music	-

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1 With the unit in Stop mode, press the SETUP button on the remote.

❶ **Player Menu :** Setup of the Display Language
Use the Player preference menu to select the language for the player's on-screen displays.

❷ **Disc Menu :** Setup of the Menu Language
Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed in.

❸ **Audio :** Setup of the Audio Language
Use the Audio preference menu to select the soundtrack language.

❹ **Subtitle :** Setup of the Subtitle Language
Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.

❺ **Parental :** Setup of the Parental Level
Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.

❻ **Audio Options :** Setup of the Audio Options
❼ **Display Options :** Setup of the Display Options
Use to select which type of screen you want to watch and several display options.

2 Use the UP/DOWN buttons on the remote to access the different features.

3 Press the ENTER button to access the sub features.

To make the setup screen disappear after setting up, press the SETUP button again.

NOTE

Depending on the disc, some Setup Menu selections may not work.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 44

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

Using the Player Menu Language

e.g Setting up in English.

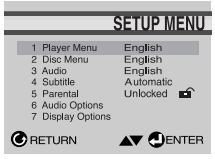

1. With the unit in Stop mode, press the SETUP button.
2. Use the UP/DOWN buttons to select the Player Menu.
3. Press the ENTER button.
4. Use the UP/DOWN buttons to select 'English'.
5. Press the ENTER button.

- English is selected and the screen returns to SETUP MENU.
- To make the SETUP MENU disappear, press the RETURN button.

Using the Disc Menu Language

This function changes the text language only on the disc menu screens.

e.g Setting up in English.

1. With the unit in Stop mode, press the SETUP button.
2. Use the UP/DOWN buttons to select Disc Menu.
3. Press the ENTER button.
4. Use the UP/DOWN buttons to select 'English'.

- Select "Others" if the language you want is not listed.

5. Press the ENTER button.

- English is selected and the screen returns to SETUP MENU.

Using the Audio Language

1. With the unit in Stop mode, press the SETUP button.
2. Press the UP/DOWN buttons to move to Audio.
3. Press the ENTER button.
4. Press the UP/DOWN buttons to select 'English' .

- Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
- Select "Others" if the language you want is not listed.

5. Press the ENTER button.

- English is selected and the screen returns to SETUP MENU.

Using the Subtitle Language

1. With the unit in Stop mode, press the SETUP button.
2. Use the UP/DOWN buttons to select Subtitle.
3. Press the ENTER button.
4. Use the UP/DOWN buttons to select 'English'.

- Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio preference.
- Select "Others" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.

5. Press the ENTER button.

- English is selected and the screen returns to SETUP MENU.

NOTE

- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 46

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

1 With the unit in Stop mode, press SETUP button. The Setup Menu screen appears.

2 Use UP/DOWN to select Parental. Press ENTER. The Parental Control screen appears.

3 Use LEFT/RIGHT to select Yes if you want to use a password. Press ENTER. The Enter Password screen appears.

4 Enter your password. The Re-enter Password screen appears to confirm the password. Enter your password again. The Parental Control screen appears.

5 **About the Rating Level** ;

The Rating Level will work only when Use Password is set to Yes. To unlock the player, use LEFT/RIGHT to select No. Use UP/DOWN to select Rating level. Press ENTER.

- Use UP/DOWN to select the level(e.g. Level 6) and press ENTER. Discs that contain Level 7 will now not play.
- To cancel the rating level, use LEFT/RIGHT to select No in Use Password.

6 **About the Change Password** ;

- Use UP/DOWN to select Change Password. Press ENTER. The Change Password screen appears.
- Enter your new password. Re-enter the new password again.

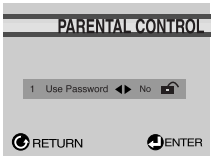

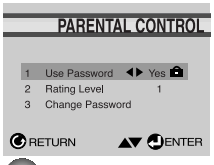

e.g Setting up in LEVEL6.

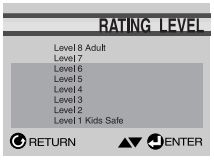

NOTE

- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.
- If you have forgotten your password, see Forget Password in the Troubleshooting Guide.

Setting Up the Audio Options

1 With the unit in Stop mode, press the SETUP button.

2 Use the UP/DOWN buttons to select Audio Options. Then press the ENTER button.

3 Use the UP/DOWN buttons to select the desired item. Then press the LEFT/RIGHT buttons.

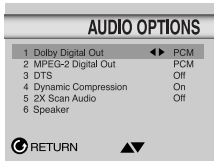

❶ Dolby Digital Out

1. PCM :
Converts to PCM(2CH) audio.
Select PCM when using the Analog Audio Outputs.
2. Bitstream :
Converts to Dolby Digital Bitstream (5.1CH).
Select Bitstream when using the Digital Audio Output.

NOTE : Be sure to select the correct Digital Output or no audio will be heard.

❷ MPEG-2 Digital Out

1. PCM :
Converts to PCM(2CH) audio.
Select PCM when using the Analog Audio Outputs.
2. Bitstream :
Converts to MPEG-2 Digital Bitstream (5.1CH or 7.1CH).
Select Bitstream when using the Digital Audio Output.

❸ DTS

1. Off : Doesn't output digital signal.
2. On : Outputs DTS Bitstream via digital output only. Select DTS when connecting to a DTS Decoder.

❹ Dynamic Compression

1. On : To select dynamic compression.
2. Off : To select the standard range.

❺ 2X Scan Audio

1. Off : Turns 2X audio off.
Though 2X Scan Audio is ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2 Audio.
2. On : Turns 2X audio on.

❻ Speaker (DVD-S428K only)

CHANGING SETUP MENU

NOTE

- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.
- Manufactured under license from Dolby Laboratories.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 48

Surround Sound Speaker Setup
(DVD-S428K only)

1 Press the SETUP button in play or stop mode.

2 Press the UP/DOWN buttons to select Audio Options. Then press the ENTER button.

3 Use the UP/DOWN buttons to select Speaker SETUP. Then press the ENTER button.

4 Use the UP/DOWN or LEFT/RIGHT buttons to select the desired item. Then press the ENTER button.

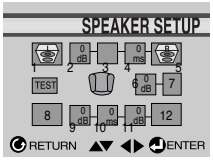

1. Speaker Mode(Front L)
2. Channel Balance(Center)OdB
3. Speaker Mode(Center)
4. Delay Time(Center)Oms
5. Speaker Mode(Front R)
6. Channel Balance(Subwoofer)OdB
7. Speaker Mode(Subwoofer)
8. Speaker Mode(Surround L)
9. Channel Balance(Surround L)OdB
10. Delay Time(Surround L/R)Oms
11. Channel Balance(Surround R)OdB
12. Speaker Mode(Surround R)

Setting up SPEAKER MODE
- If you have connected the system to a speaker with low frequencies of 100Hz or below, select 'Found (Large illustration)'.
- If you have connected the system to a speaker without low frequencies of 100Hz or below, select 'Found(Small illustration)'. If you don't connect a subwoofer, always select 'Found(Large illustration)' for the Front Speakers(L/R).
- When you don't have a particular speaker connected, select 'Not found (No illustration visible)'.

Setting up DELAY TIME
- When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. You can set Delay Time in the Center/Surround Speaker to customize the sound to the acoustic of your room.

Setting CENTER SPEAKER
- If the distance of Dc is equal to or longer than the distance of Df in the left figure, set the mode as Oms. Otherwise, change the setting according to the table below.

(A) = Df - Dc

Distance of (A)(in)	Setting(ms)
0.00	0
0.34	1
0.68	2
1.02	3
1.36	4
1.70	5

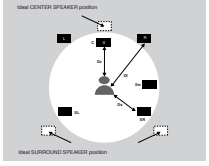

Setting SURROUND SPEAKERS
- If the distance of Df is equal to the distance of Ds in the above, set the mode as Oms. Otherwise, change the setting according to the table on the right.

(B) = Df - Ds

Distance of (B)(in)	Setting(ms)
0.00	0
1.02	3
2.04	6
3.06	9
4.08	12
5.10	15

Setting up TEST
The test output signals come clockwise starting from the Front Speaker(L). Adjust Channel Balance to match to the volume of test signals memorized in the system.

FRONT(L) → CENTER → FRONT(R) → SUBWOOFER
SURROUND(R) → SURROUND(L)

NOTE

- **How to make the SETUP MENU disappear or return to menu screen during set up.** Press RETURN button.
- The subwoofer test output signal is lower than the other speakers.
- The MPEG Multichannel logo is a trademark registered by PHILIPS Corporation.

Setting Up the Display Options

1 With the unit in Stop mode, press the SETUP button.

2 Use the UP/DOWN buttons to select Display Options. Then press the ENTER button.

3 Use the UP/DOWN buttons to select the desired item. Then press the LEFT/RIGHT buttons.

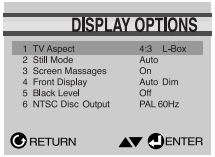

❶ **TV Aspect**
Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).
1. 4:3 Letter Box :
Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
2. 4:3 Pan-Scan :
Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
3. 16:9 Wide :
You can view the full 16:9 picture on your widescreen TV.

❷ **Still Mode**
These options will help prevent picture shake in still mode and display small text clearer.
1. Auto : When selecting Auto, Field/Frame mode will be automatically converted.
2. Field : Select this feature when the screen shakes in the Auto mode.
3. Frame : Select this feature when you want to see small letters more clearly in the Auto mode.

❸ **Screen Messages**
Use to turn on-screen messages On or Off.

❹ **Front Display**
Adjust the brightness of the unit's front panel display.
1. Auto Dim : Makes the Front Panel Display dim automatically when playing a DVD.
2. Bright : Makes the Front Panel Display bright.
3. Dim : Makes the Front Panel Display dim.

❺ **Black Level**
Adjusts the brightness of the screen.(On/Off)

❻ **NTSC Disc Output**
"NTSC" if the screen only has one NTSC-video entrance. If this is not the case, you can choose to leave "PAL 60Hz" as is.

NOTE

- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press the RETURN button.

CHANGING SETUP MENU

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 50

Controlling a TV with the Remote
(DVD-S328K/DVD-S428K only)

The remote can also be set up to control most TVs. To program the remote, use the code that corresponds to your brand.

TV Codes

CODE	BRAND
01	SAMSUNG_4
02	SAMSUNG_6, LG, LOEWE, PHILIPS, FINLUX, YOKO, LOEWE OPTA, MITSUBISHI, PHONOLA, RADIOLA, SCHNEIDER
03	SAMSUNG_1
04	SAMSUNG_2
05	SAMSUNG_3
06	SAMSUNG_5
07	TOSHIBA
08	PANASONIC_4
09	GRUNDIG, BLAUPUNKT, SIEMENS
10	SHARP
11	HITACHI
12	SANYO, AKAI, FISHER
13	HITACHI, SABA, THOMSON, NORDMENDE
14	HITACHI, NORDMENDE, SABA, TELEFUNKEN, THOMSON, BRANDT, FERGUSON, PIONEER, TELEAVA
15	SONY
16	TOSHIBA, SANYO, SHARP, SONY, MITSUBISHI
17	TOSHIBA, GRUNDIG, FINLUX
18	TOSHIBA
19	TOSHIBA
20	PHILIPS, PHONOLA, RADIOLA
21	TOSHIBA, GRUNDIG, CGE, IMPERIAL, MIVAR
22	PHILIPS, SABA, BANG&OLUFSEN, BRONVEGA, FINLUX, FORMENTI, LOEWE OPTA, METZ, WEGA, PHONOLA, RADIOMARELLI, SINGER, SINUDYNE
23	NOKIA, PANASONIC, SABA, PIONEER, REZ, SELECO, SALORA
24	HITACHI, NORDMENDE, PANASONIC, SABA, TELEFUNKEN, THOMSON, CONTINENTAL, EDISON
25	PANASONIC_2
26	PANASONIC_3
27	PANASONIC_6
28	TELEFUNKEN
29	MIVAL
30	LG_2
31	SHARP_2
32	JVC
33	THOMSON ASIA
34	THOMSON ASIA

1 Turn on the TV.

2 Point the DVD's remote at the TV.

3 While holding the TV POWER button down, enter the code for your brand.

e.g For SAMSUNG 4 TVs

While holding down the TV POWER button, enter 0 and then 1.

4 If the TV turns off, setup is complete.

Enter other codes of the same brand if the first code does not work.

5 To operate the TV, use the "TV Function Buttons" described on page 17,19.

NOTE

The remote may not be able to control every model TV of the brands listed.

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action	Page
No operations can be performed with remote.	• Check the batteries in the remote. May need replacing. • Operate the remote control at a distance of no more than 20 feet. • Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again.	P4
Disc does not play.	• Ensure that the disc is installed with the label side facing up. • Check the region number of the DVD.	P 7
5.1 channel sound is not being reproduced.	• 5.1 channel sound is reproduced only when the following conditions are met. : 1) The DVD player is connected with the proper amplifier 2) The disc is recorded with 5.1 channel sound. • Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside. • Check if your audio system is connected and working properly. • In a SETUP Menu, is the Audio Output set to Bitstream?	P 20, P 47~48
The ⊘ icon appears on screen.	• The features or action cannot be completed at this time because: 1. The DVD's software restricts it. 2. The DVD's software doesn't support the feature (e.g., angles). 3. The feature is not available at the moment. 4. You've requested a title or chapter number or search time that is out of range.	P 23
Disc Menu doesn't appear.	• Check if the disc has a Menu.	P 43~44
Play mode differs from the Setup Menu selection.	• Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.	P 43~49
The screen ratio cannot be changed.	• The Screen Ratio is fixed on your DVDs.	P 49
No audio.	• Make sure you have selected the correct Digital Output in the Audio Options Menu.	P 47~48
Forgot password	• Press power on from a cold start with no disc in the unit. Press the STOP and PLAY buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the SETUP button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press ENTER and the Create Password display will appear. You can now set your rating level and change your password to a new number.	P 46
If you experience other problems.	• Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. • If the problem still cannot be solved, please contact your nearest authorized service center.	

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST Eng3 11/21/02 3:47 PM Page 52

Specifications

General	Power Requirements	AC 110~240V, 50/60 Hz
	Power Consumption	13 W
	Weight	2.8 Kg
	Dimensions	430mm X 240mm X 79mm
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
Disc	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 3.49 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (COMPACT DISC)	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 74 min.
	CD : 8Cm (COMPACT DISC)	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 20 min.
	VCD : 12Cm	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 74 min. (Video + Audio)
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
	S-VIDEO	Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.286 Vp-p (75 Ω load)
Audio Output	2 channel	L(1/L), R(2/R)
	*Frequency Response	48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz
	*S/N Ratio	110 dB (DVD-S128/DVD-S228) 105 dB (Karaoke off Mode DVD-S328K/DVD-S428K)
	*Dynamic Range	100 dB (DVD-S128/DVD-S228) 96 dB (Karaoke off Mode DVD-S328K/DVD-S428K)
	*Total Harmonic Distortion	0.004 % (DVD-S128/DVD-S228) 0.004 % (Karaoke off Mode DVD-S328K/DVD-S428K)

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

Memo

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 2

1. การติดตั้ง

เครื่องเล่นเลเซอร์ดิสก์นี้ต้องใช้กับกระแสไฟฟ้าระบบที่แสดงไว้ที่ด้านหลังเครื่อง ให้ตั้งเครื่องเล่นเลเซอร์ดิสก์ด้านแนวตั้งและวางไว้ในสถานที่มีช่องว่างระบายอากาศเพียงพอ(7~10ซม.) และอย่าปิดช่องระบายอากาศของเครื่อง ห้ามวางสิ่งของที่มีน้ำหนักบนเครื่องเล่นเลเซอร์ดิสก์ห้ามวางส่วนประกอบหนักบนเครื่องเล่นเลเซอร์ดิสก์ห้ามวางเครื่องขยายเสียงหรืออุปกรณ์ที่เกิดความร้อนบนตัวเครื่อง อย่าโยกย้ายเครื่องในขณะที่กำลังปฏิบัติงานอยู่เพราะแผ่นดิสก์ เครื่องเล่นเลเซอร์ดิสก์นี้ถูกออกแบบให้ใช้ติดต่อกันได้ ปิดวิทช์ของเครื่องให้อยู่ในโหมด **STAND-BY** ไม่ต้องถอดปลั๊กไฟออกจากตำแหน่งยกเว้นในกรณีที่หยุดใช้งานเครื่องเล่นเลเซอร์ดิสก์เป็นเวลานาน.

2. ข้อควรระวัง

เพื่อป้องกันอันตรายจากกระแสไฟฟ้าอย่าให้เครื่องเล่นเลเซอร์ดิสก์โดนน้ำฝนหรือความชื้นเช่น อย่าวางแจกันดอกไม้ซึ่งมีน้ำอยู่และเครื่องทำความร้อนหรือแผ่นคลุมบนตัวเครื่อง หากเครื่องไม่ทำงานให้ถอดปลั๊กไฟออกจากตัวเครื่อง ต้องใช้เครื่องเล่นเลเซอร์ดิสก์ของท่านภายในบ้านเท่านั้นไม่ให้ใช้ในทางอุตสาหกรรม หากเครื่องเล่นเลเซอร์ดิสก์ของท่านอยู่ในอากาศหนาว เช่น ระหว่างขนส่งช่วงฤดูหนาวให้รอประมาณ 2 ชั่วโมงจนกว่าเครื่องจะปรับเคียงกับอุณหภูมิห้อง.

3. ข้อควรปฏิบัติเพื่อความปลอดภัย

ห้ามเปิดฝาปิดด้านหลังหรือถอดส่วนประกอบของเครื่องโดยเด็ดขาด อาจได้รับอันตรายจากกระแสไฟฟ้าดูดหรือสัมผัสกับแสงเลเซอร์ซึ่งเป็นอันตรายต่อร่างกายได้ห้ามข้องมองช่องใส่ดิสก์หรือภายในเครื่องมีอเครื่องเล่นเลเซอร์ดิสก์กำลังทำงานอยู่

4. การเก็บรักษาแผ่นดิสก์

ต้องระมัดระวังในการเก็บรักษาแผ่นดิสก์ที่แผ่นดิสก์ส่วนที่เป็นศูนย์กลางด้วยนิ้วมือ วางแผ่นดิสก์ลงในถาดโดยให้ด้านที่มีตัวหนังสืออยู่ด้านบน ทำความสะอาดแผ่นดิสก์โดยเริ่มจากศูนย์กลางของแผ่นดิสก์ออกสู่ด้านนอก เก็บไว้ในกล่องใส่แผ่นดิสก์ที่สะอาดและเก็บรักษาในแนวตั้ง ห้ามใช้น้ำมันเบนซินทินเนอร์หรือน้ำมันสนต่างๆในการทำความสะอาดของแผ่นดิสก์
หากมีฝุ่นแผ่นดิสก์ลากปากใช้ผ้านุ่มเช็ดให้สะอาด ต้องเช็ดแผ่นดิสก์ตามแนวรัศมีนะนั้นอาจเกิดรอยขีดข่วนและทำให้เกิดเสียงรบกวนขณะที่เล่นดิสก์.

5. แบตเตอรี่

ถ่านที่ใช้ในเครื่องรีโมทคอนโทรลที่อาจทำลายสิ่งแวดล้อมได้ห้ามทิ้งถ่านของเครื่องเล่นเลเซอร์ดิสก์ในถังขยะทั่วไป ควรติดต่อช่างผู้เชี่ยวชาญพิเศษในการเปลี่ยนถ่านของเครื่องเล่นเลเซอร์ดิสก์.

6. การเก็บรักษาฝาครอบของเครื่อง

เพื่อความปลอดภัยให้ถอดปลั๊กไฟออกเมื่อทำความสะอาดทุกครั้ง
* ห้ามใช้น้ำมันเบนซินทินเนอร์หรือน้ำมันสนต่างๆในการทำความสะอาด
* เช็ดฝาครอบด้วยผ้านุ่ม

1

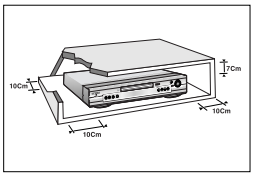

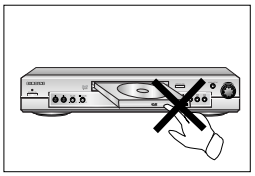

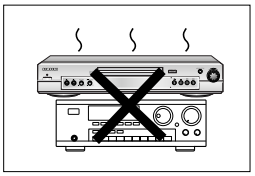

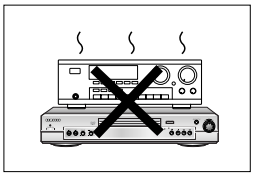

2

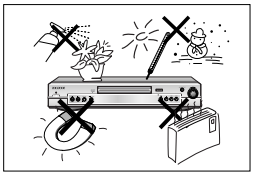

3

4

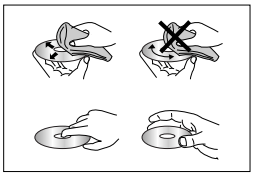

5

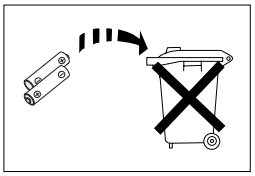

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 4

ข้อควรทราบก่อนการใช้งาน

ส่วนประกอบ

รีโมทคอนโทรล

ถ่านไฟฉายขนาด **AA**
สำหรับใส่ในรีโมทคอนโทรล



คู่มือการใช้งาน

สาย **Video/Audio**

วิธีใส่ถ่านในรีโมทคอนโทรล

1 เปิดฝาช่องใส่ถ่านซึ่งอยู่ ด้านหลังรีโมท

2 ใส่ถ่านขนาด AAจำนวน 2 ก้อน ให้แน่ใจว่าขั้ว + และขั้ว – ของถ่านอยู่ในตำแหน่ง ที่ถูกต้อง หรือไม่

3 ปิดฝาช่องใส่ถ่านไว้ตามเดิม

กรณีที่รีโมทไม่ทำงาน

- ตรวจดูว่าขั้ว + และขั้ว – ของถ่านอยู่ในตำแหน่ง ที่ถูกต้อง หรือไม่
- ตรวจดูว่าถ่านมีไฟหรือไม่
- ตรวจดูว่ามีสิ่งใดบังตัวส่ง สัญญาณของรีโมทหรือไม่
- ตรวจดูว่าถูกรบกวนจากการใช้ ไฟฟลูออเรสเซนต์ใน บริเวณ ใกล้เคียงหรือไม่

สารบัญ

คุณสมบัติทั่วไป....6
ชนิดและลักษณะของแผ่นดิสก์....7
รายละเอียดด้านหน้าเครื่อง....8
จอแสดงการทำงาน....10
รายละเอียดด้านหลังเครื่อง....11
ทำความรู้จักกับรีโมทคอนโทรล....14

การเลือกวิธีเชื่อมต่อ....20

การเล่นแผ่นดิสก์....22
การค้นหาและการกระโดดข้าม....24
การใช้ปุ่ม....25
การเล่นซ้ำ....26
การเล่นตามโปรแกรมและการเลือกเล่นตามต้องการ....27

การเล่น S.FIT....28
การเล่นตามแช็ปเตอร์....29
การทำงานของ Disc View....30
การเล่นซ้ำแบบช้า....31
การเลือกเสียงภาษาต่างๆ....32
การเลือกภาษาของคำบรรยายหรือคำแปล....33
การเปลี่ยนมุมกล้อง....34
การใช้ฟังก์ชั่นเล่นซ้ำโดยย้อนหลังทันที....35
การกำหนดสิ่งที่ต้องการ....36
การดึงภาพใกล้และการใช้ระบบเสียง 3D....37
การเล่น MP3....38

การใช้ฟังก์ชั่นคาราโอเกะ(KARAOKE)....40
การจองเพลง....41
ฟังก์ชั่นเสียง....42

การใช้ Setup Menu....43
การตั้งโปรแกรมภาษา....44
การตั้งโปรแกรม Parental Control....46
การตั้งโปรแกรม Audio Options....47
การติดตั้งระบบเสียงรอบทิศทางของลำโพง....48
การตั้งโปรแกรม Display Options....49

การควบคุมโทรทัศน์โดยใช้รีโมท....50
คู่มือการแก้ปัญหา....51
ข้อมูลจำเพาะ....52

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 6

คุณสมบัติทั่วไป

เสียงชั้นเลิศ
Dolby ดิจิตอลที่ Dolby Laboratories
สร้างขึ้นมาจะให้เสียงสมจริงและชีวิตชีวา

จอภาพ
วีดีโอสร้างโดยใช้เทคโนโลยีอัดภาพระบบ MPEG2
แสดงทั้งภาพ มาตรฐาน และภาพกว้าง (16:9)

ภาพช้า
ภาพสำคัญดูได้โดยใช้ฟังก์ชั่นภาพช้า

เล่นตามโปรแกรม
ท่านสามารถจัดตั้งแทรคส์และเล่นได้ตามความต้องการ

การควบคุมการเล่นเฉพาะอย่าง
การควบคุมฟังก์ชั่นเล่นเฉพาะอย่างสามารถกำหนดให้เด็ก
ไม่สามารถใช้งานได้ เช่น
การดูภาพยนตร์ซึ่งมีความรุนแรงหรือรายการบาง
รายการซึ่ง เป็นรายการสำหรับผู้ใหญ่เท่านั้น

ฟังก์ชั่นเมนูบนจอ
ท่านสามารถเลือกภาษา(ออดิโอ/หัวข้อย่อย)
และขนาดจอในขณะที่ท่านบันเทิงกับภาพยนตร์

การเล่นช้า
ท่านสามารถเล่นช้าเพลงหรือภาพยนตร์ได้ง่ายโดยการก
ดปุ่ม REPEAT เท่านั้น

MP3
เครื่องนี้สามารถเล่นดิสก์ ที่สร้างจาก MP3 ไฟล์ได้

การเล่นช้าโดยย้อนหลังทันที
ฟังก์ชั่นนี้ใช้เพื่อทำการเล่นภาพยนตร์ย้อนหลัง 10
วินาทีจากตำแหน่งปัจจุบันแล้วเล่นช้า

หมายเหตุ

- ดิสก์ที่ไม่สามารถเล่นกับเครื่องนี้ได้:
  - DVD-ROM
  - DVD-RAM
  - CD-ROM
  - CDV
  - CDI
- ชุบเปอร์ออดิโอซีดีของชั้น HD.
- สำหรับเล่นเสียงเฉพาะ CDGs แต่ไม่ใช่กราฟิกส
- ขึ้นอยู่กับเงื่อนไขการบันทึกเสียงของดิสก์
  เครื่องอาจไม่สามารถเล่นบางดิสก์ได้
  - DVD-R
  - CD-RW
  - DVD+RW, -RW

การป้องกันการลอกเลียนแบบ

- แผ่น DVD ส่วนใหญ่จะมีระบบป้องกันการลอกเลียนแบบ ด้วยเหตุนี้ท่าน
  จำเป็นต้องเชื่อมต่อเครื่องเล่นเลเซอร์ดิสก์กับเครื่องโทรทัศน์โดยตรงโดยไม่ต่อ กับ VCR เมื่อต่อกับ VCR
  จะทำให้ลักษณะของภาพผิดเพี้ยนไป ซึ่งเกิดขึ้นเนื่องจากระบบการป้องกันการลอกเลียนแบบของแผ่นดิสก์
- ลิขสิทธิ์ทางการค้าของผลิตภัณฑ์ชิ้นนี้จะได้รับการคุ้มครอง
  จากการจดทะเบียนในสหรัฐอเมริกาและสิทธิคุ้มครองทรัพย์สินทางปัญญาอื่นๆของบริษัท ไมโครวิชั่น
  การใช้เทคโนโลยีป้องกันการลอกเลียนแบบต้อง อยู่ภายใต้การควบคุมของบริษัทไมโครวิชั่น เทคโนโลยีดังกล่าวต้อง
  ใช้ภายในบ้านและ จำกัดบางสถานที่สำหรับการใช้เพื่อเรียกเก็บค่าชม นอกจากกรณีดังกล่าวแล้วต้อง
  ได้รับการอนุญาตจากไมโครวิชั่นเป็นลายลักษณ์อักษรห้ามถอดส่วนประกอบหรือ
  เปลี่ยนส่วนประกอบต่างๆ โดยเด็ดขาด

ชนิดและลักษณะของแผ่นดิสก์

เครื่องเล่น DVD นี้สามารถใช้กับแผ่นดิสก์ที่มีเครื่องหมายต่อไปนี้

ชนิดของแผ่นดิสก์ (เครื่องหมาย)	ประเภทของงานบันทึก	ขนาดของแผ่นดิสก์	เวลาที่เล่น (สูงสุด)	ลักษณะ
DVD VIDEO	เสียงและภาพ	12Cm	เล่นด้านเดียว 240 นาที เล่นสองด้าน 480 นาที	• DVD ให้ภาพและเสียงที่ดีเยี่ยมเหมาะกับระบบ Dolby Digital และ MPEG-2 • การทำงานต่างๆ ของภาพและเสียงสามารถเลือกได้ง่ายจากคำสั่งบนจอภาพ
		8Cm	เล่นด้านเดียว 80 นาที เล่นสองด้าน 160 นาที	
VIDEO-CD COMPACT disc DIGITAL VIDEO	เสียงและภาพ	12Cm	74 นาที	• VIDEO-CD สมบูรณ์แบบด้วยคุณภาพ VHS และเทคโนโลยี MPEG-1
		8Cm	20 นาที	
AUDIO-CD COMPACT disc DIGITAL AUDIO	เสียง	12Cm	74 นาที	• แผ่นเสียงบันทึกด้วยสัญญาณ Analog ทำให้มีเสียงรบกวนมากกว่า CD ซึ่งบันทึกด้วยสัญญาณ Digital ที่มีคุณภาพเสียงดีกว่าเสียงรบกวนน้อยกว่า
		8Cm	20 นาที	

เครื่องหมายบนแผ่นดิสก์

- เลขที่รหัสผลิตภัณฑ์ อเมริกา, Number
- ระบบ PAL ใช้ประเทศอังกฤษฝรั่งเศสเยอรมันและประเทศไทย
- แผ่นดิสก์ระบบ Dolby
- แผ่นดิสก์ระบบ Stereo
- แผ่นดิสก์ Audio ระบบ Digital
- ระบบ DTS
- MP3 ดิสก์

เลขที่รหัสผลิตภัณฑ์

ทั้งเครื่องเล่น DVD และแผ่นดิสก์จะมีเลขที่รหัสผลิตภัณฑ์ รหัสนี้จะต้องสอดคล้องกัน มิฉะนั้น
จะเล่นแผ่นดิสก์ไม่ได้ เลขที่รหัสผลิตภัณฑ์จะแสดงไว้ที่ด้านหลังเครื่อง

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 8

รายละเอียดด้านหน้าเครื่อง

DVD-S128/DVD-S228

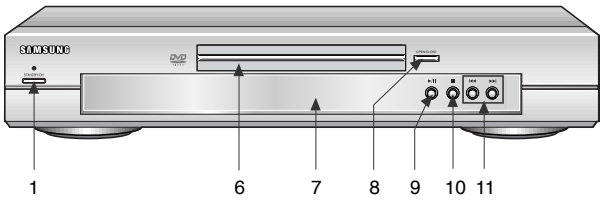

DVD-S328K

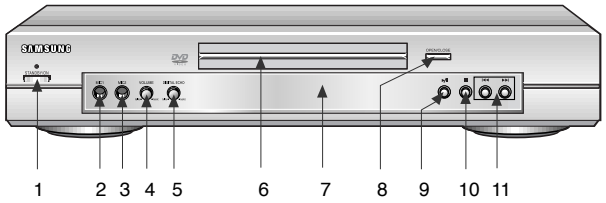

DVD-S428K

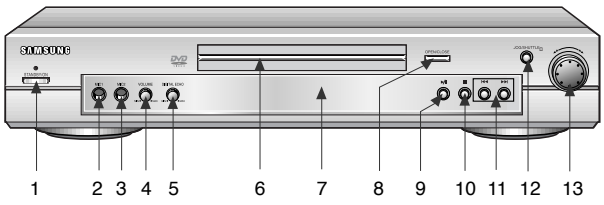

TH

การควบคุมจากด้านหน้าเครื่อง

1. STANDBY/ON (เปิด/ปิดเครื่อง)
- เมื่อเสียบปลั๊กไฟเหนือปุ่ม STANDBY/ON จะติด กดปุ่มนี้ไฟจะดับและเครื่องเริ่มทำงาน

2. MIC 1
- ต่อกับไมโครโฟน 1 สำหรับฟังก์ชั่นคาราโอเกะ

3. MIC 2
- ต่อกับไมโครโฟน 2 สำหรับฟังก์ชั่นคาราโอเกะ

4. VOLUME
- ใช้เพื่อปรับระดับเสียงของไมโครโฟน

5. DIGITAL ECHO
- ใช้เพื่อปรับความก้องเสียงหน่วงเวลา

6. DISC TRAY (ถาดดิสก์)
- กดปุ่มนี้เพื่อเปิดและปิดถาดดิสก์

7. DISPLAY(จอแสดงการทำงาน)
- เครื่องหมายแสดงการทำงานจะปรากฏบนจอ

8. OPEN/CLOSE (เปิด/ปิด ถาดดิสก์)
- กดปุ่ม OPEN/CLOSE (เปิด/ปิด) เพื่อเปิดและปิดถาดดิสก์

9. PLAY/PAUSE (เล่น/หยุดชั่วขณะ)
- ใช้เริ่มเล่นหรือหยุดการเล่นแผ่นดิสก์ชั่วขณะ

10. STOP (หยุด)
- ใช้หยุดเล่นแผ่นดิสก์

11. SKIP (กระโดดข้าม)
- ใช้ข้ามฉากหรือเพลง

12. JOG (ลูกบิดด้านใน)
- ใช้เข้าสู่คุณลักษณะ Shuttle ที่มีแผงของ Shuttle อยู่:เมื่อกด JOG ไฟสัญญาณจะสว่างขึ้น

13. SHUTTLE (ลูกบิดด้านนอก)
- ใช้มือเครื่องเล่น DVD และ CD กรอเทปเดินหน้าหรือกลับรวดเร็วอยู่ในโหมด JOG (กดปุ่ม JOGไว้),ใช้เพื่อเลื่อนเฟรมออกไปข้างหน้า/ CD แทรก

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 10

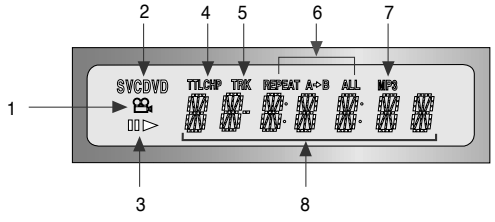

จอแสดงการทำงานด้านหน้าเครื่อง

1. Angel Indicator (เครื่องหมายบอกมุมกล้อง) สามารถเลือกมุมฉากที่บันทึกด้วยกล้องหลายตัว

2. Disc type indicator เครื่องหมายบอกชนิดของแผ่นดิสก์

3. เครื่องหมายบอกการเล่น , Pause (หยุดเล่นชั่วขณะ), Forward (เดินหน้า)

4. DVD : Title number บอกหมายเลขของเรื่อง /Chapter number บอกหมายเลขของ Chapter

5. Video /Audio CD : Track number บอกหมายเลข Trackของ Video และ Audio

6. Repeat Play mode บอกการเล่นซ้ำ

7. ไฟแสดงระบบ MP3

8. หน้าจอแสดงข้อมูลอื่นๆ ในการทำงานของเครื่องเช่น PLAY (กำลังเล่น), STOP (หยุด), LOAD (รับและแสดงข้อมูลของแผ่นดิสก์),
no DISC : ไม่มีแผ่นดิสก์ในถาดดิสก์
OPEN : ถาดดิสก์เปิดอยู่
LOAD : เครื่องเล่นกำลังแสดงข้อมูลเกี่ยวกับแผ่นดิสก์

DVD-S128/DVD-S228

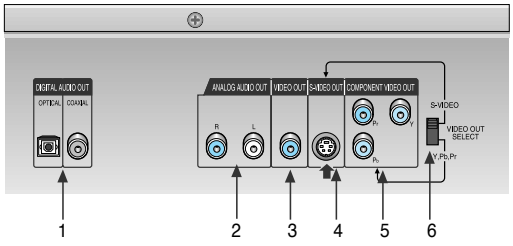

ด้านหลัง

1. DIGITAL AUDIO OUT JACK
- ใช้เป็นตัวนำภาพหรือใช้เข้ากับ Dobly Digital Receiver โดยต่อกับเครื่องขยาย AV ซึ่งมีเครื่องถอดรหัส Dolby Digitalหรือเครื่องถอดรหัส DTS.

2. ANALOG AUDIO OUT JACK
- ต่อกับ Audio input jacks ที่เครื่องรับโทรทัศน์, เครื่องรับ audio/video หรือ VCR

3. VIDEO OUT JACK
- ใช้สายต่อ Video เสียบที่ช่องนี้แล้วต่อไปที่ช่อง Video Input Jack ที่เครื่องรับโทรทัศน์

4. S-VIDEO OUT JACK
- ใช้สาย S-VIDEO ต่อจากช่องนี้ไปที่ S-Video Jackที่เครื่องรับโทรทัศน์เพื่อให้ได้ภาพที่มีคุณภาพยิ่งขึ้น เลือก S-Video ได้ที่ Video Out Select

5. COMPONENT VIDEO OUT JACKS
- ใช้ช่องนี้ถ้าเครื่องรับโทรทัศน์มีช่องเสียบ Component Video In ช่องเสียบนี้มีทั้ง Pr, Pb และ Y Videoถ้าใช้ร่วมกับ S-Video จะช่วยให้ได้ภาพที่มีคุณภาพยิ่งขึ้นเลือก Y, Pb, Pr ได้ที่ VIDEO OUT SELECT

6. VIDEO OUT SELECT SWITCH
- ใช้เพื่อเลือกวีดีโอเอ้าท์ ถ้าเลือก Y, Pb, Pr แล้ว S-Viseo จะไม่ทำงาน หากเลือก S-Viseo แล้ว Y, Pb, Pr จะไม่ทำงาน

หมายเหตุ

* ให้เลือกสวิทช์ VIDEO OUT SELECT ในโหมด Stop หรือ Power Off

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 12

รายละเอียดด้านหลังเครื่อง

ภาษาไทย

DVD-S328K

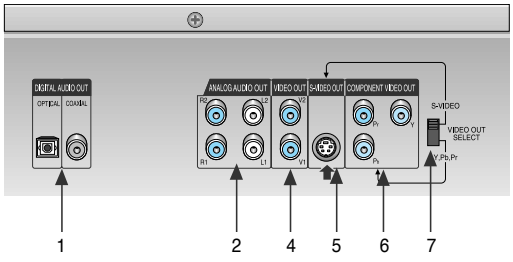

DVD-S428K

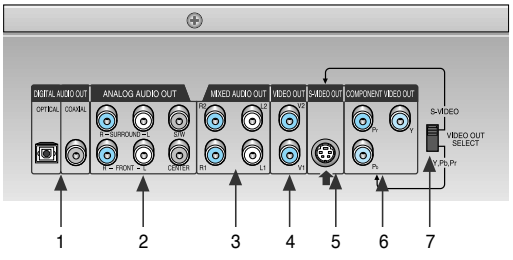

ด้านหลัง

1. DIGITAL AUDIO OUT JACK
- ใช้เป็นตัวนำภาพหรือใช้เข้ากับ Dobly Digital Receiver โดยต่อกับเครื่องขยาย AV ซึ่งมีเครื่องถอดรหัส Dolby Digitalหรือเครื่องถอดรหัส DTS.

2. ANALOG AUDIO OUT JACK
- ต่อกับ Audio input jacks ที่เครื่องรับโทรทัศน์, เครื่องรับ audio/video หรือ VCR

3. MIXED AUDIO OUT JACKS
- ต่อกับ Audio input jacks ที่เครื่องรับโทรทัศน์, เครื่องรับ audio/video หรือ VCR

4. VIDEO OUT JACK
- ใช้สายต่อ Video เสียบที่ช่องนี้แล้วต่อไปที่ช่อง Video Input Jack ที่เครื่องรับโทรทัศน์

5. S-VIDEO OUT JACK
- ใช้สาย S-VIDEO ต่อจากช่องนี้ไปที่ S-Video Jackที่เครื่องรับโทรทัศน์เพื่อให้ได้ภาพที่มีคุณภาพยิ่งขึ้น เลือก S-Video ได้ที่ Video Out Select

6. COMPONENT VIDEO OUT JACKS
- ใช้ช่องนี้ถ้าเครื่องรับโทรทัศน์มีช่องเสียบ Component Video In ช่องเสียบนี้มีทั้ง Pr, Pb และ Y Videoถ้าใช้ร่วมกับ S-Video จะช่วยให้ได้ภาพที่มีคุณภาพยิ่งขึ้นเลือก Y, Pb, Pr ได้ที่ VIDEO OUT SELECT

7. VIDEO OUT SELECT SWITCH
- ใช้สวิตช์นี้ตั้งโปรแกรม Video Out
- ถ้าเลือก Y, Pb, Pr แล้ว S-Video จะไม่ทำงาน
- ถ้าเลือก S-Video แล้ว Y, Pb, Pr จะไม่ทำงาน

หมายเหตุ

* ให้เลือกสวิทช์ VIDEO OUT SELECT ในโหมด Stop หรือ Power Off

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 14

DVD-S128/DVD-S228

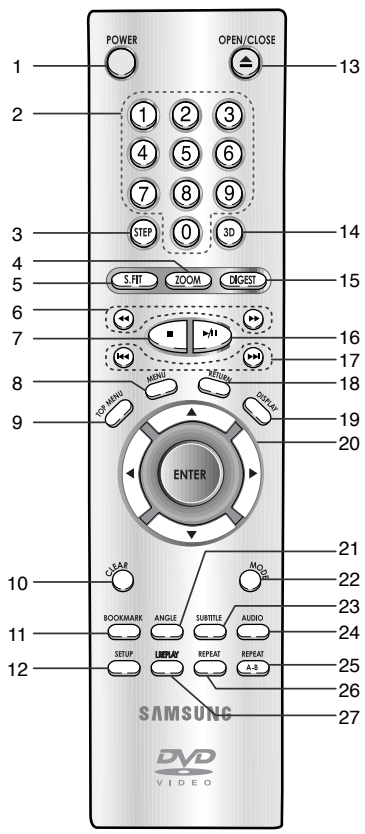

ปุ่มควบคุมการทำงานของ DVD

1. ปุ่ม **DVD POWER**
   (ปุ่มเปิด/ปิดการทำงานของ **DVD**)
2. ปุ่ม **NUMBER**
3. ปุ่ม **STEP**
   • เล่นภาพทีละเฟรม
4. ปุ่ม **ZOOM**
5. ปุ่มเล่น S.FIT
6. ปุ่ม **SEARCH**
   • สำหรับค้นหาย้อนหลังและล่วงหน้าในแผ่นดิสก์
7. ปุ่ม **STOP**
8. ปุ่ม **MENU**
   • สำหรับเรียกดู Menu (รายการสำหรับให้เลือก) ของแผ่นดิสก์
9. ปุ่ม **TOP MENU**
   • สำหรับแสดงข้อมูลเกี่ยวกับดนตรีหรือ Video
10. ปุ่ม **CLEAR**
    • ใช้ลบ Menu หรือเครื่องหมายแสดงการทำงานบนจอภาพปุ่ม
11. **BOOKMARK**
12. ปุ่ม **SETUP**
    • นำรายการติดตั้งเครื่องเล่น DVD ขึ้นมา
13. ปุ่ม **OPEN/CLOSE**
14. ปุ่ม **3D SOUND**
15. ปุ่มเล่นคาราโอเกะ
16. ปุ่ม **PLAY/PAUSE**
    • ใช้เริ่มเล่นและหยุดเล่นแผ่นดิสก์ชั่วขณะ
17. ปุ่ม **SKIP**
    • สำหรับข้ามเรื่อง ตอน หรือ Track ที่ไม่ต้องการเล่น
18. ปุ่ม **RETURN**
    • ใช้เรียกกลับไปยัง Menu ก่อนหน้านี้
19. ปุ่ม **DISPLAY**
    • ใช้แสดงการทำงานของแผ่นดิสก์ในขณะนั้น
20. ปุ่ม **ENTER/DIRECTION (UP/DOWN หรือ LEFT/RIGHT)**
    • ปุ่มนี้ทำงานโดยการขึ้นลงของลูกศร
21. ปุ่ม **ANGLE**
    • ใช้สำหรับเลือกมุมกล้องที่ต้องการ
22. ปุ่ม **MODE**
    • สำหรับตั้งโปรแกรมคำสั่งพิเศษ
23. ปุ่ม **SUBTITLE**
24. ปุ่ม **AUDIO**
    • สำหรับเลือก Function ต่าง ๆ ของแผ่นดิสก์
25. ปุ่ม **REPEAT A-B**
    • สำหรับเลือกเล่นซ้ำ Title(เรื่อง), Chapter(ตอน), Track, (ร่อง), Disc (แผ่นดิสก์) เดิม A-B
26. ปุ่ม **REPEAT**
    • สำหรับเลือกเล่นซ้ำ Title (เรื่อง), Chapter (ตอน), Track, (ร่อง), Disc (แผ่นดิสก์) เดิม
27. ปุ่ม **I.REPLAY**
    • ฟังก์ชั่นนี้ใช้เพื่อทำการเล่นภาพยนตร์ย้อนหลัง 10 วินาทีจากตำแหน่งปัจจุบัน

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 16

DVD-S328K

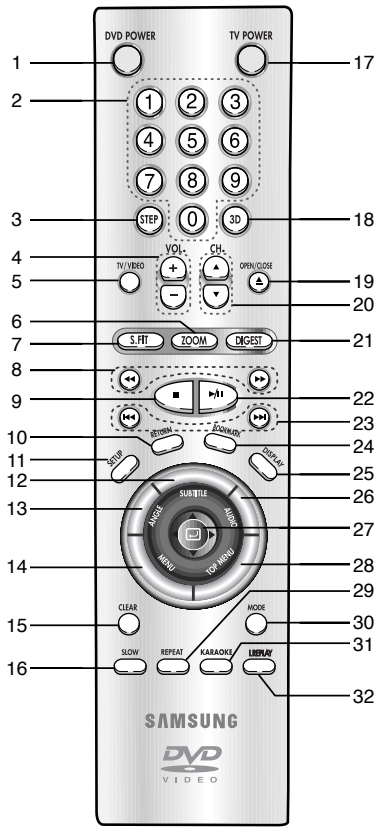

ปุ่มควบคุมการทำงานของ DVD

1. ปุ่ม **DVD POWER**
2. ปุ่ม **NUMBER**
3. ปุ่ม **STEP**
   - เล่นภาพทีละเฟรม
4. ปุ่มปรับระดับเสียง
5. ปุ่มเลือกทีวี/วีดีโอ
6. ปุ่ม **ZOOM**
7. ปุ่มเล่น S.FIT
8. ปุ่ม **SEARCH**
   - สำหรับค้นหาย้อนหลังและล่วงหน้าในแผ่นดิสก์
9. ปุ่ม **STOP**
10. ปุ่ม **RETURN**
    - ใช้เรียกกลับไปยัง Menu ก่อนหน้าน
11. ปุ่ม **SETUP**
    - นำรายการติดตั้งเครื่องเล่น DVD ขึ้นมา
12. ปุ่ม **SUBTITLE**
13. ปุ่ม **ANGLE**
    - ใช้สำหรับเลือกมุมกล้องที่ต้องการ
14. ปุ่ม **MENU**
    - สำหรับเรียกดู Menu (รายการสำหรับให้เลือก) ของแผ่นดิสก์
15. ปุ่ม **CLEAR**
    - ใช้ลบ Menu หรือเครื่องหมายแสดงการทำงานบนจอภาพปุ่ม
16. ปุ่มเล่นภาพแบบช้า
17. ปุ่ม **TV POWER**
18. ปุ่ม **3D SOUND**
19. ปุ่ม **OPEN/CLOSE**
20. ปุ่มเลือกช่อง
21. ปุ่มเล่นคาวแซปเคอร์
22. ปุ่ม **PLAY/PAUSE**
    - ใช้เริ่มเล่นและหยุดเล่นแผ่นดิสก์ชั่วขณะ
23. ปุ่ม **SKIP**
    - สำหรับข้ามเรื่อง ตอน หรือ Track ที่ไม่ต้องการเล่น
24. **BOOKMARK**
25. ปุ่ม **DISPLAY**
    - ใช้แสดงการทำงานของแผ่นดิสก์ในขณะนั้น
26. ปุ่ม **AUDIO**
    - สำหรับเลือก Function ต่าง ๆ ของแผ่นดิสก์
27. ปุ่ม **ENTER/DIRECTION (UP/DOWN หรือ LEFT/RIGHT)**
    - ปุ่มนี้ทำงานโดยการขึ้นลงของเวิดซ์
28. ปุ่ม **TOP MENU**
    - สำหรับแสดงข้อมูลเกี่ยวกับดนตรีหรือ Video
29. ปุ่ม **REPEAT**
    - สำหรับเลือกเล่นซ้ำ Title (เรื่อง), Chapter (ตอน), Track, (ร่อง), Disc (แผ่นดิสก์) เดิม
30. ปุ่ม **MODE**
    - สำหรับตั้งโปรแกรมคำสั่งที่ปุ่ม
31. ปุ่มคาราโอเกะ
    - สำหรับการใช้ฟังก์ชั่นคาราโอเกะ
32. ปุ่ม **I.REPLAY**
    - ฟังก์ชั่นนี้ใช้เพื่อทำการเล่นภาพยนตร์ย้อนหลัง 10 วินาทีจากตำแหน่งปัจจุบัน

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 18

DVD-S428K

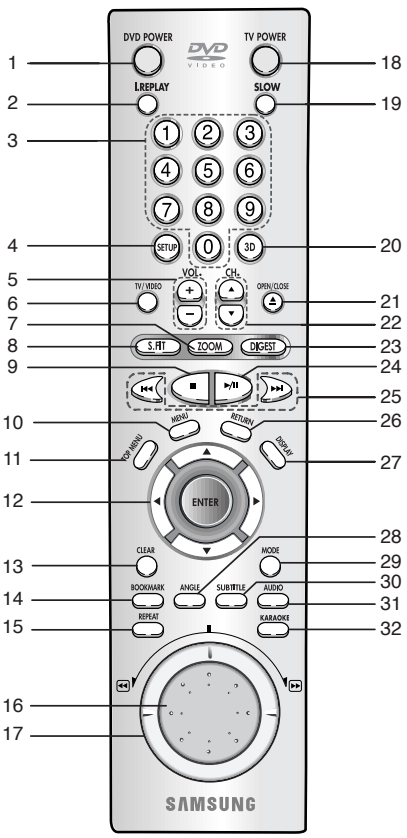

ปุ่มควบคุมการทำงานของ DVD

1. ปุ่ม **DVD POWER**
2. ปุ่ม **I.REPLAY**
   - ฟังก์ชั่นนี้ใช้เพื่อทำการเล่นภาพยนตร์ย้อนหลัง 10 วินาทีจากตำแหน่งปัจจุบัน
3. ปุ่ม **NUMBER**
4. ปุ่ม **SETUP**
   - นำรายการติดตั้งเครื่องเล่น DVD ขึ้นมา
5. ปุ่มปรับระดับเสียง
6. ปุ่มเลือกทีวี/วีดีโอ
7. ปุ่ม **ZOOM**
8. ปุ่มเล่น **S.FIT**
9. ปุ่ม **STOP**
10. ปุ่ม **MENU**
    - สำหรับเรียกดู Menu (รายการสำหรับให้เลือก) ของแผ่นดิสก์
11. ปุ่ม **TOP MENU**
12. ปุ่ม **ENTER/DIRECTION (UP/DOWN หรือ LEFT/RIGHT)**
    - ปุ่มนี้ทำงานโดยการขึ้นลงของเวิสซ์
13. ปุ่ม **CLEAR**
    - ใช้ลบ Menu หรือเครื่องหมายแสดงการทำงานบนจอภาพปุ่ม
14. **BOOKMARK**
15. ปุ่ม **REPEAT**
    - สำหรับเลือกเล่นซ้ำ Title (เรื่อง), Chapter (ตอน), Track, (ร่อง), Disc (แผ่นดิสก์) เดิม
16. เล่นเฟรมต่อเฟรม
    - ในซีดีโหมดทำการค้นหาแทรค
17. ลูกบิด **SHUTTLE**
    - เล่นภาพแบบช้าหรือเร็ว
18. ปุ่ม **TV POWER**
19. ปุ่มเล่นภาพแบบช้า
20. ปุ่ม **3D SOUND**
21. ปุ่ม **OPEN/CLOSE**
22. ปุ่มเลือกช่อง
23. ปุ่มเล่นดาวแซปเตอร์
24. ปุ่ม **PLAY/PAUSE**
    - ใช้เริ่มเล่นและหยุดเล่นแผ่นดิสก์ชั่วขณะ
25. ปุ่ม **SKIP**
    - สำหรับข้ามเรื่อง ตอน หรือ Track ที่ไม่ต้องการเล่น
26. ปุ่ม **RETURN**
    - ใช้เรียกกลับไปยัง Menu ก่อนหน้าน
27. ปุ่ม **DISPLAY**
    - ใช้แสดงการทำงานของแผ่นดิสก์ในขณะนั้น
28. ปุ่ม **ANGLE**
    - ใช้สำหรับเลือกมุมกล้องที่ต้องการ
29. ปุ่ม **MODE**
    - สำหรับตั้งโปรแกรมคำสั่งพิปุ่ม
30. ปุ่ม **SUBTITLE**
31. ปุ่ม **AUDIO**
    - สำหรับเลือก Function ต่าง ๆ ของแผ่นดิสก์
32. ปุ่มคาราโอเกะ
    - สำหรับการใช้ฟังก์ชั่นคาราโอเกะ

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 20

ภาพต่อไปนี้แสดงการต่อเครื่องเล่น DVD เข้ากับเครื่องรับโทรทัศน์และอุปกรณ์อื่นๆ

การเตรียม

- ปิดเครื่องเล่น DVD เครื่องรับโทรทัศน์และอุปกรณ์อื่นๆ ก่อนต่อสายและถอดสายเชื่อมต่อต่างๆ
- ปฏิบัติตามคู่มือการใช้อุปกรณ์อื่นๆ ที่จะเชื่อมต่อกับเครื่องเล่น DVD ด้วย

การต่อเครื่องเล่น DVD กับเครื่องเสียง

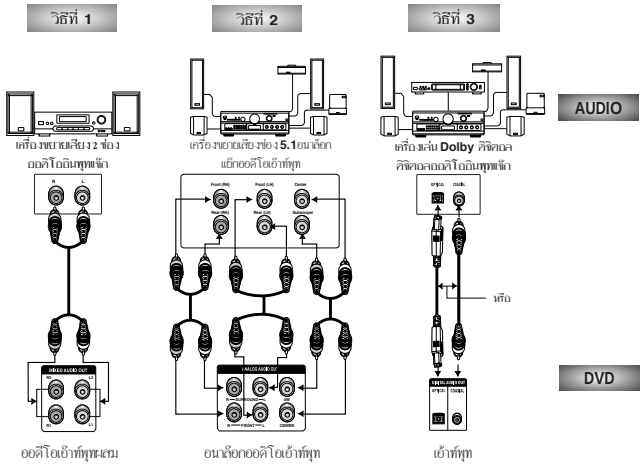

TH

ภาษาไทย

การต่อเครื่องเล่น DVD กับเครื่องรับโทรทัศน์ (สำหรับ Video)

เครื่องรับโทรทัศน์ชนิดธรรมดาชนิดจอกว้างและเครื่องฉาย ฯลฯ

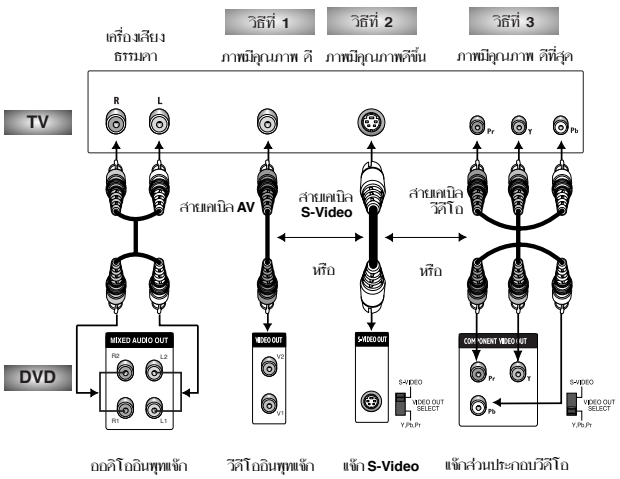

- วิธีที่ 1 เครื่องเล่น DVD ต่อกับเครื่องรับโทรทัศน์โดยใช้ Video Input Jack
- วิธีที่ 2 เครื่องเล่น DVD ต่อกับเครื่องรับโทรทัศน์โดยใช้ S-Video Input Jacks (ถ้าสามารถเลือก S-Video ใน Video Out Select)
- วิธีที่ 3 เครื่องเล่น DVD ต่อกับเครื่องรับโทรทัศน์ โดยใช้ Component Video Jack (ถ้าสามารถเลือกใช้ Y, Pb, Pr ใน Video Out Select)

หมายเหตุ

- ถ้าเลือก Y, Pb, Pr แล้ว S-Video อาจจะไม่ทำงาน
- ถ้าเลือก S-Video แล้ว Y, Pb, Pr อาจจะไม่ทำงาน

TH

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 22

ก่อนเล่นแผ่นดิสก์

• เปิดเครื่องรับโทรทัศน์ กดปุ่ม TV/Video เพื่อเลือกโปรแกรม Video
• เปิดระบบเครื่องเสียงและเลือก AUX , CD หรือ DVD

หลังจากเสียบปลั๊กเครื่องเล่น DVD ให้กดปุ่ม DVD Power ที่รีโมทคอนโทรลจะปรากฏ
ข้อความในกรอบข้อยมือถ้าต้องการเลือกภาษาใดให้กดปุ่มตามหมายเลขของภาษานั้น(จอภาพนี้จะปรากฏเฉพาะครั้งแรกที่เสียบปลั๊กเครื่องเล่น DVD)

SELECT MENU LANGUAGE

Press	1	for English
Touche	2	pour Français
Drücke	3	für Deutsch
Pulsar	4	para Español
Premere	5	per Italiano
Toets	6	voor Nederlands

การเล่นแผ่นดิสก์

1 ถ้ากดปุ่ม OPEN/CLOSE.
ไฟหน้าปุ่ม STANDBY จะดับและถาดแผ่นดิสก์จะเลื่อนออก

2 ค่อยๆ วางแผ่นดิสก์ลง
ในถาดโดยให้ด้านที่มีตัวหนังสืออยู่ด้านบน

3 กดปุ่ม PLAY/PAUSE หรือ OPEN/PAUSE
เลื่อนถาดใส่แผ่นดิสก์เข้า

4 การหยุดเล่นขณะที่เล่นแผ่นดิสก์ ถ้าต้องการหยุดให้กดปุ่ม STOP

5 การนำแผ่นดิสก์ออกจากถาดกดปุ่ม OPEN/CLOSE

6 การหยุดเล่นชั่วขณะกดปุ่ม PLAY/PAUSE หรือ STEP
ที่รีโมทคอนโทรลซึ่งขณะที่กำลังเล่นอยู่
– ภาพบนจอหยุดและไม่มีเสียง
– ถ้าต้องการเล่นต่อให้กดปุ่ม PLAY/PAUSE อีกครั้ง

7 การเล่นภาพทีละเฟรม(Step Motion) (ยกเว้น CD)
DVD-S428K : เมื่อหมุน JOG DIAL ท่านสามารถชมภาพเฟรมต่อเฟรมได้
DVD-S128 / DVD-S228 / DVD-S328K: กดปุ่มSTEPที่รีโมทหรือหมุนลูกบิด JOGที่อยู่ข้างหน้าของเครื่องเล่นDVDในระหว่างเครื่องทำงาน
– ทุกครั้งที่กดปุ่ม STEP ภาพ Frame ใหม่จะปรากฏขึ้น
– ขณะที่ปุ่ม STEP ทำงานจะไม่มีเสียง
– กดปุ่ม PLAY/PAUSE จะกลับไปเล่นภาพแบบปกติ

8 การเล่นภาพช้า (Slow Motion) (ยกเว้น CD)
DVD-S128 / DVD-S228 / DVD-S328K: กดปุ่ม FWD SEARCH (▶▶) หรือ REV SEARCH (◀◀) ที่รีโมทหรือหมุนลูกบิด SHUTTLE ที่อยู่ข้างหน้าของเครื่องเล่น DVD ในขณะที่อยู่โหมด PAUSE หรือ STEP. ถ้ากดปุ่ม FWD SEARCH (▶▶) หรือ REV SEARCH (◀◀) สามารถเลือกภาพช้า 1/2, 1/4 หรือ 1/8 ของภาพปกติได้.
DVD-S428K : กดปุ่ม SKIP และค้างไว้เพื่อเลือกความเร็วของการเล่นระหว่าง 1/8X, 1/4X, หรือ 1/2X ของความเร็วธรรมดา
– ขณะที่ปุ่มนี้กำลังทำงานจะไม่มีเสียง.
– กดปุ่ม PLAY/PAUSE จะกลับไปเล่นภาพแบบปกติ.
– ถ้าเล่น VCD จะไม่สามารถเล่นภาพช้าแบบถอยหลังได้.

การเล่นต่อ

เมื่อหยุดเล่นแผ่นดิสก์ เครื่องเล่นจะสามารถจำตำแหน่งที่หยุดเล่นได้ดังนั้นเมื่อกดปุ่ม PLAY อีกครั้งก็จะเล่นต่อจากตำแหน่งที่หยุดเล่นไว้ (ถ้าไม่ได้เอาแผ่นดิสก์ออก กดปุ่ม STOP 2 ครั้งหรือถอดปลั๊กไฟออก)

หมายเหตุ

• ถ้าอยู่ในคำสั่ง STOP ทิ้งไว้นานเกิน 5 นาที ระบบไฟจะตัดโดยอัตโนมัติ
• หากทิ้งเครื่องไว้นานกว่า 30 นาทีเครื่องจะปิดโดยอัตโนมัติ (ฟังก์ชั่นปิดเครื่องอัตโนมัติ)
(เฉพาะรุ่น DVD-S128 , DVD-S228)
• ถ้าอยู่ในโหมด STOP มากกว่า 1 นาทีโดยปราศจากการเล่นฟังก์ชั่นใดๆ หน้าจอจะถูกกระตุ้นและเกิดอาการ Fade in และ Fade out และจะเล่น ซ้ำเรื่อยๆไปแต่เมื่อกดปุ่ม PLAY จะกลับไปเล่นแบบปกติ
• เครื่องหมาย ⊘ แสดงว่ามีการกดปุ่มซึ่งการทำงานที่ผิดพลาด

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 24

ระหว่างการเล่นสามารถค้นหาตอน (Chapter) หรือ Track ที่ต้องการได้อย่างรวดเร็วรวมทั้งสามารถกระโดดข้ามไปยังตอนที่เลือกไว้

การค้นหาผ่าน **Chapter** หรือ **Track**

1 **DVD-S128/DVD-S228/DVD-S328K :** กดปุ่ม REVERSE หรือ FORWARD SEARCH บนรีโมทแล้วกดอีกครั้งเพื่อค้นหาในความเร็วบน DVD, VCD, CD

DVD-S428K : ในระหว่างที่กำลังเล่นแผ่นดิสค์ให้หมุนหน้าปัดเลื่อนตำแหน่งที่อยู่บนรีโมทคอนโทรลหากท่านต้องการใช้งานปุ่มที่อยู่ทางด้านหน้า
การเปิดตัวเลื่อนภาพ/หน้าปัดเลื่อนตำแหน่งที่ด้านหน้าจะสามารถใช้งานได้ที่หลายระดับความเร็ว

DVD	2X, 4X, 8X, 16X, 32X, 128X
VCD	4X, 8X
CD	2X, 4X, 8X

• ขึ้นอยู่กับแผ่นดิสก์ เสียงอาจมีเมื่ออยู่ในโหมด 2X .

การข้าม **TRACK**

1 ระหว่างที่เล่นกดปุ่ม Next Skip หรือ Back Skip

• ระหว่างที่เล่น DVD หากกดปุ่ม Next Skip สิ่งที่เล่นอยู่จะเลื่อนไปยัง Chapter ต่อไป ถ้ากดปุ่ม Back Skip จะกลับไปยังภาพแรกของ Chapter นี้ และหากกดปุ่ม Back Skip อีกครั้งหนึ่งจะกลับไปยังภาพแรกของ Chapter ก่อน

• ระหว่างที่เล่น VCD 2.0 ด้วยโปรแกรม Menu Off, VCD 1.1 หรือ CD หากกดปุ่ม NEXT SKIP สิ่งที่เล่นอยู่จะเลื่อนไปยัง Track ต่อไป ถ้ากดปุ่ม BACK SKIP จะกลับไปยังจุดเริ่มต้นของ TRACK ก่อนหน้านี้

• สำหรับ VCD ที่ Track ยาวเกิน 15 นาที หากกดปุ่ม NEXT SKIP สิ่งที่เล่นอยู่จะ เลื่อนไปข้างหน้า 5 นาที ถ้ากดปุ่ม BACK SKIP จะถอยไปข้างหลัง 5 นาที

• สำหรับ VCD 2.0 เมื่อเล่นด้วยโปรแกรม Menu Mode หรือ Track View ถ้ากดปุ่ม NEXT SKIP สิ่งที่เล่นอยู่จะเลื่อนไปที่ MENU ต่อไปหรือแสดง Track View ต่อไป แต่หากกดปุ่ม BACK SKIP จะย้อนกลับไปที่ MENU ก่อนหน้านั้นหรือแสดง Track View ก่อนหน้านั้นให้เห็น (ดูหน้า 30)

เมื่อเล่น **DVD**

1 ขณะที่เล่น DVD กดปุ่ม DISPLAY ที่รีโมทคอนโทรล

- หมายเลขของเรื่อง (Tittle) และ Chapter ที่กำลังเล่นรวมทั้งเวลาที่เล่นไปแล้ว จะปรากฏขึ้น
• ใช้ปุ่ม NUMBER เพื่อข้ามเรื่องอื่น แล้วกดปุ่ม ENTER
• LEFT/RIGHT หรือปุ่ม NUMBER เพื่อเลือกหมายเลขของเรื่องและ Chapter กด ENTER อีกครั้ง
• เมื่อต้องการจะใส่ค่าเวลาเริ่มเล่นกดปุ่ม UP/DOWN เพื่อเลือกหลังจากนั้นใช้ปุ่มหมายเลขเพื่อตั้งเวลาและกดปุ่ม ENTER
• ให้ใช้ปุ่ม LEFT/RIGHTเพื่อเปลี่ยนค่าของออดิโอ, คำแปล, และระดับเสียงของปัจจุบัน
• ถ้าไม่ต้องการให้รายละเอียดปรากฏกดปุ่ม DISPLAY อีกครั้ง

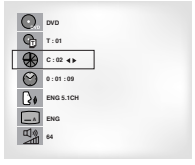

เมื่อเล่น **CD/VCD**

1 ขณะที่เล่น CD/VCD กดปุ่ม DISPLAY ที่รีโมทคอนโทรลหมายเลขของ Track ที่กำลังเล่นเวลาที่เล่นไปแล้วและตัวควบคุมความดังของเสียงจะปรากฏขึ้น
• ใช้ปุ่ม UP/DOWN เพื่อเลือกหมายเลข Track กดปุ่ม LEFT/RIGHT หรือปุ่ม NUMBER เพื่อไปสู่ Track หมายเลขอื่นแล้วกด ENTER อีกครั้ง
• เมื่อต้องการจะใส่ค่าเวลาเริ่มเล่นกดปุ่ม UP/DOWN เพื่อเลือก ใช้ปุ่มหมายเลขเพื่อตั้งเวลาและกดปุ่ม ENTER
• ในการปรับระดับเสียง ให้ใช้ปุ่ม LEFT/RIGHT

- ถ้าไม่ต้องการให้รายละเอียดปรากฏกดปุ่ม DISPLAY อีกครั้ง

⋆ ในโหมด VCD 2.0 (โหมด MENU ON) เฉพาะการควบคุมระดับเสียงจะปรากฏบนหน้าจอ

VCD

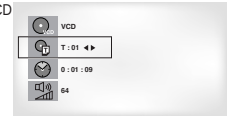

CD

หมายเหตุ

• **แชปเตอร์คืออะไร**
แผ่นDVDอาจถูกแบ่งออกเป็นหลายแชปเตอร์ (คล้ายๆกับแทร็กของออดิโอซีดี)
• **Tittle คืออะไร**
DVD จะมีเรื่องต่างๆหลายเรื่อง ตัวอย่างเช่นแผ่นดิสก์ที่มีภาพยนตร์ 4 เรื่องแต่ละเรื่องคือ Tittle

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 26

การเล่นซ้ำ

การเล่นซ้ำ Track, Chapter,Tittle ที่กำลังเล่นการเลือก (A-B) และการเล่นซ้ำสำหรับแผ่นดิสก์ทุกแผ่น (VCD/CD เท่านั้น)

เมื่อเล่น DVD

1 กดปุ่ม REPEAT

2 การเลือก Chapter,Tittle และ A-B โดยใช้ปุ่ม LEFT/RIGHT
- A-B REPEAT
- กดปุ่ม REPEAT(เล่นซ้ำ)จากนั้นเลือกA-B จากหน้าจอโดยการกดปุ่มLEFT/RIGHT (ซ้าย/ขวา)บนรีโมทคอนโทรล
- กดปุ่ม ENTER เพื่อกำหนดจุดเริ่มต้นการเล่นซ้ำ (A) อักษร B จะปรากฏโดยอัตโนมัติ
- กดปุ่ม ENTER เพื่อกำหนดจุดสิ้นสุดในการเล่นซ้ำ (B)

3 กดปุ่ม ENTER

4 การกลับเข้าสู่การเล่นปกติให้กดปุ่ม REPEAT อีกครั้งหนึ่งแล้วกดปุ่ม LEFT/RIGHT เพื่อเลือกปิดโปรแกรมแล้วกด ENTER

DVD

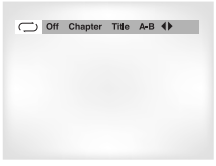

VCD/CD

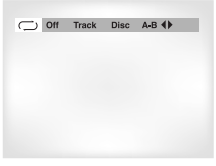

หมายเหตุ

- เครื่องเล่น DVD จะเล่นซ้ำเฉพาะในตอนหรือในเรื่องแต่ CD และ VCD จะเล่นซ้ำได้ทั้งแผ่น หรือเฉพาะ Track ดูหน้า 38 การเล่นซ้ำ MP3 ดิสก์
- โปรแกรมเล่นซ้ำจะทำงานหรือไม่ขึ้นอยู่กับแผ่นดิสก์
- ถ้าจบเรื่องหรือจบ Track ก่อนหยุดการเล่นซ้ำ (B) ตอนจบเรื่องหรือ Track จะเป็น (B) โดยอัตโนมัติ
- ถ้าใช้ VCD 2.0 (ค่าตั้ง MENU ON) จะไม่สามารถเล่นซ้ำได้

การเล่นตามโปรแกรมและการเลือกเล่นตามต้องการ

การเล่นตามโปรแกรม (DVD/VCD/CD/MP3)

1 กดปุ่ม MODE

2 ใช้ปุ่ม LEFT/RIGHT เพื่อเลือกโปรแกรมแล้วกดปุ่ม ENTER

3 ใช้ปุ่ม LEFT/RIGHT เพื่อเลือก Chapter หรือ Track แรกใส่ไว้ในโปรแกรม กดปุ่ม ENTER หมายเลขที่เลือกจะปรากฏในกรอบ Program order

4 กดปุ่ม PLAY/PAUSE แผ่นดิสก์จะเริ่มทำงานตามคำสั่งในโปรแกรม

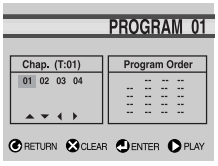

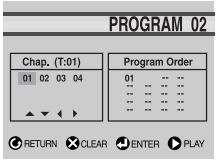

การเลือกเล่นตามต้องการ (DVD/VCD/CD/MP3)

1 กดปุ่ม MODE

2 ใช้ปุ่ม LEFT/RIGHT เพื่อเลือก Random แล้วกดปุ่ม ENTER แผ่นดิสก์จะเล่นตามต้องการ

หมายเหตุ

- การเล่นตามโปรแกรมและการเลือกเล่นตามความต้องการจะทำงานหรือไม่ขึ้นอยู่กับแผ่นดิสก์
- ถ้าใช้ VCD 2.0 (ค่าตั้ง MENU ON) โปรแกรมเหล่านี้จะไม่ทำงาน
- กลับไปเล่นแบบปกติกดปุ่ม CLEAR

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 28

การเล่น S.FIT

1 กดปุ่มเล่นS.FITบนรีโมท

- ขณะที่เครื่องเล่นภาพยนตร์ในฟอร์แมทภาพกว้าง(16 ต่อ 9) ท่านสามารถกำจัดแถบสีดำที่อยู่ข้างบนและข้างล่างของหน้าจอได้
- หน้าจอจะไม่ทำงานเมื่อโหมดซูมทำงาน(ท่านไม่สามารถกำจัดแถบสีดำที่อยู่บนหน้าจอได้) โหมดซูมจะทำงานเมื่อ S.FITทำงาน.

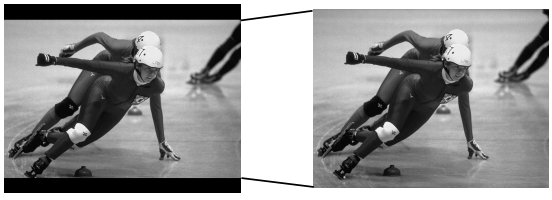

หมายเหตุ

- ท่านสามารถปรับอัตราภาพได้เฉพาะแผ่นดิสก์ที่ฟอร์แมทสำหรับจอภาพหลายอัตราเท่านั้น
- ฟังก์ชั่นนี้จะไม่ทำงานกับแผ่น DVD ที่ทำการบันทึกด้วยฟอร์แมทมุมกล้องหลายมุม
- สำหรับแผ่น DVD บางอย่างไม่สามารถกำจัดแถบสีดำได้เพราะอัตราภาพของแผ่น

การเล่นตามแช็ปเตอร์

1 ขณะที่เครื่องทำการเล่นดิสก์กดปุ่ม DIGEST

- วินโดว์ 9 ช่องที่แสดงแชปเตอร์ต่างๆ จะปรากฏบนจอโทรทัศน์
- วินโดว์ต่างๆจะแสดงการเล่น3วินาทีแรกของแต่ละแชปเตอร์

2 กดปุ่ม UP/DOWN/LEFT/RIGHT เพื่อเลือกวินโดว์ที่ท่านชอบแล้วกดปุ่ม ENTER

- วินโดว์ 9 ช่อง(แชปเตอร์) จะแสดงขึ้นบนหน้าจอพร้อมกัน กดปุ่ม SKIP เพื่อให้แสดงวินโดว์อีก 9 ช่องต่อไปหากภาพยนตร์มีแชปเตอร์มากกว่า 9 แชปเตอร์

ปุ่มข้าม

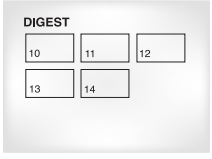

หมายเหตุ

- ท่านสามารถเริ่มเล่น DVD จากแชปเตอร์ที่ท่านต้องการได้หลังจากย้ายไปภาพยนตร์ที่ต้องการแล้ว
- ฟังก์ชั่น DIGEST อาจไม่ทำงานก็ได้ขึ้นอยู่กับประเภทของแผ่นดิสก์ที่ใช้อยู่

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 30

การทำงานของ **Disc View**

Track View (VCD)

Track View จะแสดงตอนเริ่มต้นของแต่ละ Track และจะแสดงหมายเลขของ Track

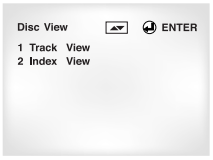

1. ระหว่างเล่นกดปุ่ม TOP MENU
2. กดปุ่ม UP/DOWN เพื่อเลือก Track View แล้วกดปุ่ม ENTER
3. เลือกภาพที่ต้องการโดยกดปุ่ม UP/DOWN หรือ LEFT/RIGHT
   - หากภาพยนตร์มีแทรคมากกว่า แทรค 9 ให้กดปุ่ม SKIP เพื่อไปที่ 9 แทรคหน้า
4. กดปุ่ม ENTER

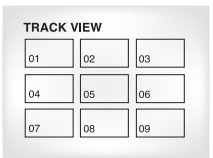

Index View (VCD)

Index View จะแสดงภาพของ Track ที่กำลังเล่นจำนวน 9 ภาพ

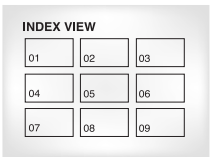

1. ระหว่างเล่นกดปุ่ม TOP MENU
2. กดปุ่ม UP/DOWN เพื่อเลือก Index View แล้วกดปุ่ม ENTER
3. เลือกภาพที่ต้องการโดยกดปุ่ม UP/DOWN หรือปุ่ม LEFT/RIGHT
4. กดปุ่ม ENTER

หมายเหตุ

- ในการเล่น DVD เมื่อกดปุ่ม TOP MENU จะทำให้ TITLE MENU ของแผ่นดิสก์จะทำงานในกรณีที่แผ่นดิสก์นั้นมีจำนวน TITLE อย่างน้อย 2TITLE
- ในการเล่น CD เมื่อกดปุ่ม TOP MENU จะเป็นการเข้าสู่โหมด INTRO และจะฟังเสียง INTRO ที่ชุดเริ่มต้นของแต่ละเพลงได้ประมาณเพลงละ10วินาที
- ท่านสามารถควบคุมได้โดยใช้ปุ่ม DIGSET

การเล่นซ้ำแบบช้า

ฟังก์ชั่นนี้ทำให้ท่านเล่นภาพซ้ำแบบช้าได้ เช่น ภาพกีฬา เต้นรำ คนตรี เป็นต้น ท่านจึงสามารถศึกษาเกี่ยวกับเรื่องเหล่านี้ได้อย่างแน่ชัด

ขณะที่เล่น DVD

1. กดปุ่ม PLAY/PAUSE
2. กดปุ่ม SKIP และค้างไว้เพื่อเลือกความเร็วของการเล่นระหว่าง 1/8X, 1/4X, หรือ 1/2X ของความเร็วธรรมดา (เฉพาะรุ่นDVD-S428K)

   กดปุ่ม F/SEARCH เพื่อเลือกความเร็วการเล่นระหว่าง1/8X, 1/4X และ 1/2X ของปกติ (เฉพาะรุ่นDVD-S128 / DVD-S228 / DVD-S328K)
3. กดปุ่ม REPEAT A-B บนรีโมทครั้งหนึ่งส่วนแรกเพื่อเล่นซ้ำขณะที่เลือกหลายความเร็ว (เลือก A-point)
4. กดปุ่ม REPEAT A-B บนรีโมทอีกครั้งหนึ่ง (เลือก B-point)

หมายเหตุ

- เครื่องจะเล่นเฉพาะจาก A ถึง B ซ้ำตามความเร็วที่ท่านกำหนดไว้
- เพื่อเสร็จสิ้นการทำงานของฟังก์ชั่น กดปุ่ม CLEAR หรือ REPEAT (A-B) อีกครั้งหนึ่งแล้วกดปุ่ม PLAY เพื่อจะทำการเล่นปกติ
- A-B REPEAT จะไม่ให้ท่านตั้งชุด (B) จนกว่าอย่างน้อย 5 วินาทีจะถูกลบไปหลังจากตั้งชุด (A) แล้ว

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:49 PM Page 32

การเลือกเสียงภาษาต่างๆ

สามารถใช้ปุ่ม Audio เลือกเสียงภาษาที่ต้องการได้อย่างรวดเร็วและง่ายดาย

การใช้ปุ่ม AUDIO

1 กดปุ่ม Audio

2 ในการเล่น DVD ใช้ปุ่ม UP/DOWN เพื่อเลือกภาษาที่ต้องการ
ภาษาที่จะเลือกฟังเสียงและดูคำบรรยายหรือคำแปลจะปรากฏ เป็นอักษรย่อ

3 ในการเล่น VCD/CD ใช้ปุ่ม UP/DOWN เพื่อเลือกระบบ Stereo, R Channel หรือ L Channel

DVD

VCD/CD



หมายเหตุ

- โปรแกรมการเลือกภาษาขึ้นอยู่กับการบันทึกแผ่นดิสก์และไม่สามารถใช้ได้กับ DVD ทั้งหมด
- แผ่นดิสก์ DVD สามารถมีได้ถึง 8 ภาษา
- วิธีตั้งโปรแกรมให้ได้เสียง ภาษาเดียวกันทุกครั้งที่เล่น DVD ให้ดูหัวข้อ "การตั้ง โปรแกรม ภาษา" หน้า 45

การเลือกภาษาของคำบรรยายหรือคำแปล

สามารถใช้ปุ่ม Subtitle เลือกภาษาของคำบรรยายหรือคำแปลที่ต้องการได้อย่างรวดเร็วและ ง่ายดาย

การใช้ปุ่ม Subtitle

1 กดปุ่ม SUBTITLE

2 ใช้ปุ่ม UP/DOWN เพื่อเลือกภาษาของคำบรรยาย หรือคำแปลที่ต้องการ

3 ใช้ปุ่ม LEFT/RIGHT เพื่อตัดสินใจว่าจะให้ Subtitle ปรากฏที่จอภาพหรือไม่
เมื่อเริ่มเล่น Subtitle จะยังไม่ปรากฏบนจอภาพ
ภาษาที่จะเลือกฟังและดูคำบรรยายหรือคำแปลจะปรากฏเป็นอักษรย่อ





หมายเหตุ

- โปรแกรมการเลือกภาษาขึ้นอยู่กับการบันทึกแผ่นดิสก์และไม่สามารถใช้ได้กับ DVD ทั้งหมด
- แผ่นดิสก์ DVD สามารถมีได้ถึง 32 ภาษา
- วิธีตั้งโปรแกรมให้ได้คำบรรยายหรือคำแปลภาษาเดียวกันทุกครั้งที่เล่น DVD ให้ดูหัวข้อ "การตั้งโปรแกรมภาษา" หน้า 45

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 34

การเปลี่ยนมุมกล้อง

ถ้า DVD มีมุมกล้องหลายมุมในฉากเดียวจะสามารถเลือกมุมกล้องที่ต้องการดูได้

การใช้ปุ่ม ANGLE

ตรวจดูว่ามีเครื่องหมาย ' **ANGLE** ' ปรากฏที่มุมขวาด้านบนของจอภาพหรือไม่

1 ถ้ามีเครื่องหมาย 'ANGLE' ให้กดปุ่ม ANGLE

2 ใช้ปุ่ม UP/DOWN เพื่อเลือกมุมกล้องที่ต้องการแล้วกดปุ่ม ENTER

3 กดปุ่ม ANGLE อีกครั้ง เมื่อไม่ต้องการให้รายละเอียดปรากฏ

การใช้ฟังก์ชั่นเล่นซ้ำโดยย้อนหลังทันที

การใช้ฟังก์ชั่นเล่นซ้ำโดยย้อนหลังทันที (DVD)

หากพลาดภาพท่านสามารถชมใหม่ได้โดยใช้ฟังก์ชั่นนี้

1 ถ้าท่านกดปุ่ม I. REPLAY เครื่องจะย้อนหลังไปประมาณ 10 วินาที แล้วทำการเล่นใหม่

* ขึ้นอยู่กับดิสก์ฟังก์ชั่นนี้อาจไม่ทำงานก็ได้

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 36

การกำหนดสิ่งที่ต้องการ

การกำหนดสิ่งที่ต้องการสามารถช่วยให้เลือกส่วนต่าง ๆ จาก DVD หรือ VCD (ค่าตั้ง MENU OFF) ทำให้หาภาพที่กำหนดได้อย่างรวดเร็ว

การเลือกกำหนดสิ่งที่ต้องการ [DVD/VCD]

1. ขณะที่เล่น กดปุ่ม BOOKMARK ที่รีโมทจะมีเครื่องหมายปรากฏบนจอ
2. ใช้ปุ่ม LEFT/RIGHT เพื่อเลื่อนไปยังเครื่องหมาย icon ที่ต้องการเลือก
3. เมื่อพบส่วนที่ต้องการจะกำหนด กดปุ่ม ENTER แล้ว icon จะเปลี่ยนเป็นตัวเลข (1,2 หรือ 3)
4. กดปุ่ม BOOKMARK เมื่อไม่ต้องการให้รายละเอียดปรากฏที่หน้าจอ

การเรียกดูฉากที่กำหนดไว้

1. ขณะที่เล่น กดปุ่ม BOOKMARK ที่รีโมท
2. ใช้ปุ่ม LEFT/RIGHT เพื่อเลือกฉากที่กำหนดไว้
3. กดปุ่ม PLAY/PAUSE เพื่อกระโดดข้ามไปยังฉากที่กำหนดไว้

การยกเลิกโปรแกรม Bookmark

1. ขณะที่เล่น กดปุ่ม BOOKMARK ที่รีโมท
2. ใช้ปุ่ม LEFT/RIGHT เพื่อเลือกหมายเลข BOOKMARK ที่ต้องการลบทิ้ง
3. กดปุ่ม CLEAR เพื่อยกเลิกหมายเลข BOOKMARK กดปุ่ม BOOKMARK เมื่อไม่ต้องการให้รายละเอียดปรากฏที่หน้าจอ

หมายเหตุ

- สามารถเลือกกำหนดไว้ได้ครั้งละ 3 ฉาก
- ถ้าใช้ VCD 2.0 [ค่าตั้ง MENU ON] จะไม่สามารถเลือกกำหนดส่วนที่ต้องการได้
- โปรแกรมกำหนดตอนที่ต้องการจะทำงานหรือไม่ขึ้นอยู่กับแผ่นดิสก์

การดึงภาพใกล้และการใช้ระบบเสียง 3D

การดึงภาพใกล้ [DVD/VCD]

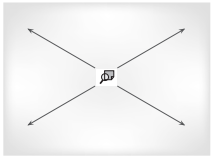

1. ขณะที่เล่นหรือหยุดชั่วขณะกดปุ่ม ZOOM ที่รีโมทจะมีเครื่องหมายสี่เหลี่ยมปรากฏบนจอภาพ
2. ใช้ปุ่ม UP/DOWN หรือ LEFT/RIGHT เพื่อเลือกส่วนใดส่วนหนึ่งของจอภาพที่ต้องการดึงภาพใกล้
3. กดปุ่ม ENTER
   - สำหรับ DVD สามารถดึงภาพได้ขนาด 2X/4X/2Xภาพปกติ
   - สำหรับ VCD สามารถดึงภาพได้ขนาด2Xขนาดเท่าตัวอื่น

การใช้ระบบเสียง 3D

ระบบเสียงรอบทิศทาง จะมีประสิทธิภาพหรือไม่ขึ้นอยู่กับการบันทึก แผ่นดิสก์ การเชื่อมต่อเครื่องเล่นกับระบบสเตอริโอ [Stereo] จะทำให้เสียงมีคุณภาพและเกิดระบบเสียงรอบทิศทางอย่างสมบูรณ์แบบ เสียงระบบนี้จะมีประสิทธิภาพเมื่อใช้เครื่องเล่น DVD กับระบบสเตอริโอ [Sterero] 2 ช่องทางผ่านสัญญาณ Analog (แผ่นดิสก์ที่บันทึกด้วยระบบ LPCM หรือ DTS จะไม่สามารถใช้ระบบเสียงนี้ได้ ถ้า DIGITAL OUTPUT ถูกตั้งเป็น BITSTREAM ใน SETUP MENU ระบบเสียง 3D จะไม่ทำงาน)

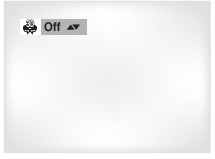

1. ขณะที่เล่นอยู่กดปุ่ม 3D จะมีเครื่องหมาย 3D SOUND ปรากฏบนจอภาพ (คุณต้องแน่ใจว่า DIGITAL OUTPUT ถูกตั้งเป็น PCM)
2. กดปุ่ม UP/DOWN เพื่อเปิดหรือปิดระบบ 3D SOUND

หมายเหตุ

- แผ่นดิสก์ที่จะใช้ระบบ 3D SOUND ได้ต้องบันทึกด้วยระบบ DOLBY SURROUND หรือ DOLBY DIGITAL อย่างไรก็ตามแผ่นดิสก์ที่บันทึกด้วยระบบทั้งสองนี้บางแผ่นอาจจะไม่มีช่องสัญญาณเสียงก็ได้
- โปรแกรมการดึงภาพใกล้และการใช้ระบบเสียง3Dจะทำงานหรือไม่ขึ้นอยู่กับแผ่นดิสก์

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 38

เมื่อใส่แผ่นดิสก์ MP3 ในเครื่องเล่นดีวีดี เครื่องจะเล่นไฟล์เพลงที่อยู่ในหมวดแรก

ฟังก์ชั่นเล่น MP3

1 กดปุ่ม Stop เพื่อหยุดเล่นเพลงแรกของไฟล์ แล้วกดปุ่ม RETURN เพื่อให้แสดงเมนูหมวดเพลงที่ข้างขวาของหน้าจอ สามารถแสดงหมวดเพลงได้ถึงแปดหมวดในครั้งเดียว ถ้ามีเพลงมากกว่าแปดหมวดให้กดปุ่ม UP/DOWN เพื่อเลื่อนหน้าจอ

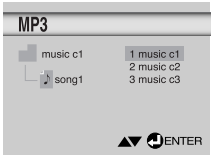

2 ใช้ปุ่ม UP/DOWN เพื่อเลือกหมวดเพลงที่ชอบแล้วกดปุ่ม ENTER ใช้ปุ่มUP/DOWN อีกครั้งหนึ่งเพื่อเลือกไฟล์เพลง แล้วกดปุ่ม ENTER เพื่อทำการเล่นไฟลเพลงที่เลือกไว้

การเล่นตามโปรแกรมและการเลือกเล่นตามต้องการ

กดปุ่ม MODE เพื่อเปิดสวิทช์ระหว่างโหมด RANDOM และ PROGRAM ดูรายละเอียดของข้อมูลเกี่ยวกับโหมดดังกล่าวในหน้า 27

หมายเหตุ

- กดปุ่ม REPEAT เพื่อฟังเพลงในไฟล์ซ้ำ
  กดปุ่ม REPEAT อีกครั้งหนึ่งเพื่อออกจากโหมดเล่นซ้ำ

เมื่อทำการเล่นดิสก์ MP3 ให้ปฏิบัติตามดังต่อไปนี้

วิธีทำการเล่น **CD-R/MP3**เมื่อทำการเล่นดิสก์ **CD-R MP3** ให้ปฏิบัติตามดังต่อไปนี้ :

- **ไฟล์ MP3** ต้องเป็นฟอร์แมท **ISO 9660** หรือ **JOLIET**
  ฟอร์แมท ISO 9660 หรือ JOLIET เหมาะกับการใช้ใน WINDOWS และ DOS และยังใช้กับ MAC ก็ได้ เฟอร์แมทดังกล่าวจึงใช้กันอย่างกว้างขวาง
- **ชื่อไฟล์ของไฟล์ MP3** ไม่ให้เกิน **8** ตัว และมีนามสกุล **.mp3** ด้วย
  เมื่อตั้งชื่อไฟล์ให้อยู่ในฟอร์แมท ชื่อ.mp3 และใช้ตัวอักษรไม่ให้เกิน 8 ตัว และหลีกเลี่ยงการใช้ตัวอักษรพิเศษ: (.,/,\,=,+).
- **เมื่อทำการบันทึกไฟล์ MP3 ให้ใช้อัตราคลายไฟล์อย่างน้อย 128 Kbps**
  คุณภาพของเสียง **MP3** จะขึ้นอยู่กับอัตราอัด/คลายไฟล์ที่ท่านเลือก เพื่อได้คุณภาพเสียงในซีดี (ฟอร์แมท MP3 ไฟล์) ต้องใช้อัตราตัวอย่างที่อยู่ในระหว่าง 128 Kbps และ 160 Kbps ถ้าหากใช้อัตราที่สูงกว่านี้ (เช่น 192 Kbps หรือมากกว่านั้นอีก) จะมีโอกาสน้อยที่จะได้คุณภาพเสียงที่ดี และไฟล์ที่ใช้อัตราต่ำกว่าอัตราตัวอย่าง 128 Kbps ก็ไม่สามารถทำการเล่นได้เช่นเดียวกัน
- **ห้ามทำการบันทึก MP3 ไฟล์ที่มีเครื่องป้องกันการคัดลอกอยู่**
  ไฟล์บางชนิดมีเครื่องป้องกันการคัดลอกอยู่ที่ติดกฎหมาย ไฟล์ดังกล่าวได้แก่ Windows Media (ลงทะเบียนเป็นเครื่องหมายการค้าขายของ Microsoft Inc) และ SDMI (ลงทะเบียนเป็นเครื่องหมายการค้าขายของ SDMI Foundation)
- **เครื่องเล่นของท่านจะรับหมวดเพลงได้เฉพาะระดับเดียวเท่านั้น**
  ท่านจึงต้องเลือก :
  -บันทึก MP3 ไฟล์ทั้งหมดในราก(root) ของดิสก์
  -และ/หรือเก็บไฟล์ตามประเภทของเพลงไว้ในหมวดต่าง ๆ (เช่น ดั้งเดิม rock jazz เป็นต้น)
- **ข้อควรระวัง :** คำแนะนำข้างบนนี้ไม่สามารถรับรองได้ว่าจะเล่น MP3 ไฟล์ได้หมดหรือประกันคุณภาพของเสียงท่านต้องสังเกตเทคโนโลยีและวิธีการสำหรับการบันทึก MP3 ไฟล์บน CDR-s เพื่อทำให้เครื่องของท่านทำการเล่นไฟล์ดังกล่าวให้มีประสิทธิภาพสูงสุด (มิฉะนั้นอาจทำให้ลดคุณภาพเสียงและในบางกรณีไม่สามารถอ่านไฟล์ได้)

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 40

การใช้ฟังก์ชั่นคาราโอเกะ (KARAOKE)
(เฉพาะรุ่น DVD-S328K/DVD-S428K)

ขั้นตอนการใช้งาน

1 เสียบสายสัญญาณเข้าที่จุดต่อ MIXED AUDIO OUT และปลายอีกด้านต่อเข้าที่วิทรีอเครื่องขยายเสียง

2 กดปุ่มเปิดเครื่อง

3 เสียบไมโครโฟนเข้าที่แจ็ก Mic 1 หรือ Mic 2 ดังนั้นโหมดคาราโอเกะจะเปลี่ยนเป็นโหมดเปิด
- การถอดไมโครโฟนจะทำให้โหมดคาราโอเกะปิดโดยอัตโนมัติ

การควบคุมคีย์

1 กดปุ่ม KARAOKE ให้อยู่ที่โหมดคาราโอเกะเปิด

2 เลือก "KEYCON" โดยใช้ปุ่ม LEFT/RIGHT

3 ใช้ปุ่ม LEFT/RIGHT เปลี่ยนไปที่น้ำเสียงที่ต้องการ

♭: ลดคีย์ละครึ่งเสเกล

♮: เสเกลเดิม

♯: ขึ้น♯เสเกลที่ละครึ่งเสเกล

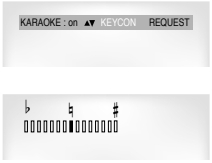

หมายเหตุ

- ฟังก์ชั่นการควบคุมคีย์ไม่สามารถจะใช้ต่อไมโครโฟนเข้าที่พุทได้
- ถ้ามีเสียงรบกวน (เสียงแหลมหรือเสียงเพี้ยน) เมื่อใช้คุณสมบัติคาราโอเกะ ให้เอาไมโครโฟนอยู่ห่างไกลจากลำโพง และลดระดับเสียงของไมโครโฟนหรือลำโพงด้วย
- เมื่อการเล่นคาราโอเกะอยู่ในโหมดOFFจะไม่สารถใช้ไมโครโฟนได้
- เมื่อเลือกโหมดSCORE ON MODE สำหรับCDหรือVCDเพลงถัดไปจะเล่นเมื่อมีข้อความ SEARCHและSCOREปรากฏขึ้น
- ขณะกำลังเล่นแผ่นMP3จะไม่สามารถใช้งานMIC&Karaoke(ไมโครโฟนและคาราโอเกะ)ได้

การจองเพลง
(เฉพาะรุ่น DVD-S328K/DVD-S428K)

ท่านสามารถจองเพลงที่จะร้องไว้ล่วงหน้าได้โดยการใช้ฟังก์ชั่นคาราโอเกะ

ขั้นตอนการใช้งาน

1 เล่นดิสก์คาราโอเกะที่มีเพลงที่จะร้อง

2 หลังจากกดปุ่ม KARAOKE ที่รีโมท และใช้ปุ่ม UP/DOWN เพื่อเปลี่ยนให้โหมดคาราโอเกะเป็น "เปิด"

3 เลือก "REQUEST" โดยการใช้ปุ่ม LEFT/RIGHT

4 ใส่หมายเลข (หมายเลขแทรกค์) ของเพลงที่ต้องการร้องในส่วนที่มีเส้นกระพริบ (--)
- ท่านสามารถจองเพลงได้ถึง 10 เพลง

5 ในขณะที่ร้องเพลงอยู่ และต้องการร้องเพลงถัดไปที่จองไว้ กดปุ่ม SKIP

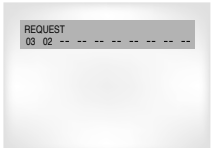

การยกเลิกเพลงที่จองไว้

1 ยกเลิกโดยการกดปุ่ม CLEAR ที่รีโมท
- เพลงที่จองสุดท้าย จะถูกลบก่อน

2 กดปุ่ม CLEAR อีกครั้งหนึ่งถ้าหากต้องการยกเลิกเพลงถัดไป

3 ถ้าต้องการจองเพลงอีก ใส่หมายเลขของเพลงในส่วนที่มีเส้นกระพริบ

หมายเหตุ

- ใช้ฟังก์ชั่นคาราโอเกะได้เมื่ออยู่ในโหมดคาราโอเกะเปิดเท่านั้น
- สำหรับเพลงสุดท้ายใช้ปุ่ม "SKIP" ไม่ได้
- ขณะที่ใช้ฟังก์ชั่น Request ไม่สามารถใช้ฟังก์ชั่น "DISPLAY" กับ "REPEAT" ได้

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 42

ฟังก์ชั่นเสียง
(เฉพาะรุ่น DVD-S328K/DVD-S428K)

ฟังก์ชั่นเสียง

1 กดปุ่มKARAOKEให้อยู่ที่โหมดคาราโอเกะเปิด



ตัดเสียงนักร้อง

– ฟังก์ชั่นนี้จะตัดเสียงนักร้องออกเหลือเฉพาะเสียงดนตรีเมื่อเล่นแผ่นดิสก์คาราโอเกะ

	การเสียงหาย	หมายเหตุ
↓	V1	ช่อง 1 เสียงหาย
↓	V2	ช่อง 2 เสียงหาย
↓	1+2	ช่อง 1 ช่อง 2 เสียงหาย
↓	ปิด	ปิดการเสียงหาย

– ใน VCD, CVD หรือ CD ท่านสามารถเลือกได้เพียงปิดหรือเปิด เท่านั้น

เพลงนำร้อง

– เพลงนำร้องไฮโลโฟนและเปียโนจะทำให้ท่านร้องเพลงง่ายขึ้น
– ฟังก์ชั่นนี้ทำงานกับ DVD คาราโอเกะดิสก์ที่บันทึกทำนองนำร้องเท่านั้น

ฟังก์ชั่นแสดงคะแนน

กดปุ่ม KARAOKE สองครั้งติดกันแล้วให้โหมด SCORE อยู่ที่ตำแหน่ง On
–เมื่อร้องเพลงเสร็จแล้วเครื่องจะแสดงคะแนนของท่าน

ข้อควรระวัง

• ถ้าแผ่นดิสก์ของภาพยนตร์ขณะที่โหมด SCORE อยู่ที่ตำแหน่ง On เครื่องจะต้องแสดงคะแนนทุกครั้งเมื่อเสร็จสิ้นการเล่นแต่ละแทร็คแล้ว ดังนั้นให้ปิดโหมด KARAOKE เมื่อแผ่นดิสก์ซึ่งใช้โหมดธรรมดา เช่น แผ่นภาพยนตร์ เป็นต้น

ประเภทของดิสก์คาราโอเกะ

• ดิสก์คาราโอเกะประเภท **DVD**

ช่อง	ช่องการโอเกะ	5 ช่อง DVD	2 ช่อง DVD
1ช่อง	L	คนครีสเตอร์โอซ้าย	คนครีสเตอร์โอซ้าย + เสียง
2ช่อง	R	คนครีสเตอร์โอขวา	คนครีสเตอร์โอขวา + เสียง
3ช่อง	M	เพลงนำร้อง	–
4ช่อง	V1	แทรคเสียง	–
5ช่อง	V2	แทรคเสียง	–

• ดิสก์คาราโอเกะประเภท **CVD, VCD**

ช่อง	ช่องการโอเกะ	CVD	VCD,CD
1 ช่อง	ช่อง1ซ้าย	คนครีสเตอร์โอซ้าย+เสียง	คนครีสเตอร์โอซ้าย
1 ช่อง	ช่อง1ขวา	คนครีสเตอร์โอขวา +เสียง	คนครีสเตอร์โอขวา+ เสียง
2 ช่อง	ช่อง2ซ้าย	คนครีสเตอร์โอซ้าย	–
2 ช่อง	ช่อง2ขวา	คนครีสเตอร์โอขวา	–

TH

การใช้ Setup Menu

Setup Menu ช่วยให้สามารถกำหนดการทำงานของเครื่องเล่น DVD ให้เลือกภาษาที่ต้องการตั้งโปรแกรมป้องกันการชม [Parental level] และปรับเครื่องเล่นให้เข้ากับเครื่องรับโทรทัศน์ได้

1 แม้ออยู่ในโหมด STOP กดปุ่ม SETUP บนรีโมท

❶ **PLAY MENU :** ใช้ตั้งโปรแกรมแสดงภาษาบนหน้าจอ
ใช้คำสั่งนี้เพื่อเลือกภาษาที่จะแสดงบนหน้าจอ

❷ **DISC MENU :** ใช้ตั้งโปรแกรมภาษา
ใช้คำสั่งนี้เพื่อเลือกภาษาที่ต้องการสั่งให้แผ่นดิสก์ของเครื่องเล่น แสดงออกมา

❸ **AUDIO :** ใช้ตั้งเสียงภาษาต่าง ๆ
ใช้คำสั่งนี้เพื่อเลือกภาษาที่บันทึกไว้

❹ **SUBTITLE :** ใช้ตั้งภาษาของคำบรรยายหรือคำแปล
ใช้คำสั่งนี้สำหรับเลือกภาษาที่คำบรรยายหรือคำแปลของแผ่นดิสก์จะแสดงออกมา

❺ **PARENTAL :** ใช้ตั้งโปรแกรมป้องกันการชม
ใช้คำสั่งนี้สำหรับตั้งโปรแกรมป้องกันเด็กชมภาพยนตร์ที่ไม่เหมาะสม เช่น ภาพยนตร์ที่มีความรุนแรงและภาพยนตร์ที่เหมาะสำหรับผู้ใหญ่เท่านั้น เป็นต้น

❻ **AUDIO OPTIONS :** ใช้ตั้งโปรแกรมเลือกระบบเสียง

❼ **DISPLAY OPTIONS :** ใช้ตั้งโปรแกรมแสดงการทำงาน
ใช้คำสั่งนี้เพื่อเลือกชนิดของจอภาพตามที่ต้องการและเลือกข้อมูลและแสดงการทำงานต่าง ๆ

2 ใช้ปุ่ม UP/DOWN ที่รีโมทเพื่อเลือกคำสั่งที่ต้องการตามข้อ1

3 กดปุ่ม ENTER เพื่อเลือกคำสั่งย่อยที่ต้องการ

กดปุ่ม SETUP อีกครั้งหนึ่งหลังจากตั้งโปรแกรมแล้ว ข้อความบนหน้าจอจะหายไป

ภาษาอังกฤษ

หมายเหตุ

• การใช้โปรแกรม Setup Menu บางโปรแกรมอาจไม่ทำงานทั้งนี้ขึ้นอยู่กับแผ่นดิสก์

TH

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 44

เมื่อตั้งโปรแกรม Player Menu, Disc Menu, Audio และ Subtitle ไว้ล่วงหน้าเครื่องเล่นจะเล่นตามโปรแกรมที่ตั้งไว้ทุกครั้ง

การใช้ Player Menu

e.g ตัวอย่างการตั้งโปรแกรมภาษาอังกฤษ

1. เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP
2. ใช้ปุ่ม UP/DOWN เพื่อเลือก PLAYER MENU
3. กดปุ่ม ENTER
4. ใช้ปุ่ม UP/DOWN เพื่อเลือก 'ENGLISH'
5. กดปุ่ม ENTER
   - เมื่อเลือกภาษาอังกฤษเสร็จเรียบร้อยแล้ว หน้าจอจะกลับไปที่ SETUP MENU
   - ถ้าไม่ต้องการให้ SETUP MENU ปรากฏให้กดปุ่ม RETURN

การใช้ Disc Menu Language

โปรแกรมนี้สามารถเปลี่ยนภาษาเฉพาะที่ปรากฏบนจอ Disc Menu

e.g ตัวอย่างการตั้งโปรแกรมภาษาอังกฤษ

1. เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP
2. ใช้ปุ่ม UP/DOWN เพื่อเลือก DISC MENU
3. กดปุ่ม ENTER
4. ใช้ปุ่ม UP/DOWN เพื่อเลือก 'ENGLISH' ให้เลือก'OTHER'ถ้าภาษาที่ต้องการไม่ปรากฏอยู่ในรายการ
5. กดปุ่ม ENTERเมื่อเลือกภาษาอังกฤษเสร็จเรียบร้อยแล้วหน้าจอจะกลับสู่ SETUP MENU

การใช้ Audio Language

1. เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP
2. กดปุ่ม UP/DOWN เพื่อเข้าสู่โปรแกรม AUDIO
3. กดปุ่ม ENTER
4. กดปุ่ม UP/DOWN เพื่อเลือก 'ENGLISH'
   - ให้เลือก 'ORIGINAL' ถ้าต้องการฟังภาษาที่ใช้ในการบันทึกแผ่นดิสก์
   - ให้เลือก 'OTHERS' ถ้าภาษาที่ต้องการไม่ปรากฏอยู่ในรายการ
5. กดปุ่ม ENTER
   - เมื่อเลือกภาษาอังกฤษเสร็จเรียบร้อยแล้ว หน้าจอจะกลับไปสู่ SETUP MENU

การใช้ Subtitle Language

1. เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP
2. ใช้ปุ่ม UP/DOWN เพื่อเลือก SUBTITLE
3. กดปุ่ม ENTER
4. ใช้ปุ่ม UP/DOWN เพื่อเลือก 'ENGLISH'
   - ให้เลือก 'AUTOMATIC'ถ้าต้องการเลือกคำบรรยายหรือคำแปลภาษาเดียวกับเสียง
   - ให้เลือก 'OTHERS' ถ้าภาษาที่ต้องการไม่ปรากฏอยู่ในรายการแผ่นดิสก์บางแผ่นอาจไม่มีภาษาที่ต้องการในกรณีนี้แผ่นดิสก์จะเล่นภาษาที่บันทึกไว้
5. กดปุ่ม ENTER
   - เมื่อเลือกภาษาอังกฤษเรียบร้อยแล้ว หน้าจะจะกลับไปสู่ SETUP MENU

หมายเหตุ

- ถ้าภาษาที่เลือกไม่มีในแผ่นดิสก์เครื่องจะเล่นภาษาที่บันทึกไว้
- ถ้าต้องการลบ SETUP MENU หรือกลับไปยังหน้าจอระหว่างตั้งโปรแกรมให้กดปุ่ม RETURN

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 46

การตั้งโปรแกรม **Parental Control**

โปรแกรมนี้จะใช้กับ DVDs ที่มีการแบ่งระดับไว้ถึง 8 ระดับ เพื่อช่วยควบคุม DVDs ชนิดต่างๆ ที่บุคคลในครอบครัวจะเปิดชม

1 เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP รายการ SETUP จะปรากฏบนหน้าจอ

2 ใช้ปุ่ม UP/DOWN เพื่อเลือก Parental กดปุ่ม ENTER หน้าจอจะปรากฏ Parental Control

3 ใช้ปุ่ม LEFT/RIGHT เพื่อเลือก YES ถ้าต้องการใช้รหัสผ่านให้กด ENTER หน้าจอสำหรับใส่รหัสผ่านจะปรากฏขึ้น

4 ใส่รหัสผ่าน
รหัสจะปรากฏขึ้นเพื่อให้ยืนยันแล้วใส่รหัสผ่านอีกครั้งหนึ่ง Parental Control จะปรากฏบนหน้าจอ

5 การกำหนดระดับการชม
การกำหนดระดับจะได้ผลเฉพาะเมื่อเลือกคำสั่ง Use Password และ YES การยกเลิกการควบคุมให้ใช้ปุ่ม LEFT/RIGHT เพื่อเลือก NO ใช้ปุ่ม UP/DOWN เพื่อเลือกตัวเลขกำหนดระดับแล้วกด ENTER
– ใช้ปุ่ม UP/DOWN เพื่อเลือกกำหนดระดับ (ตัวอย่าง ระดับ 6) และกด ENTER แผ่นดิสก์ที่มีระดับ 7 จะไม่สามารถเล่นได้
– การยกเลิกการกำหนดระดับให้กดปุ่ม LEFT/RIGHT เพื่อเลือก NO ใน Use Password

6 การเปลี่ยนรหัสผ่าน
– ใช้ปุ่ม UP/DOWN เพื่อเลือก Change Password จอภาพ Change Password จะปรากฏขึ้น
– ใส่รหัสผ่านใหม่แล้วใส่ซ้ำอีกครั้งหนึ่ง

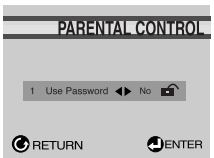

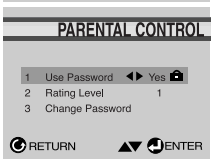

e.g ติดตั้งในระดับ 6

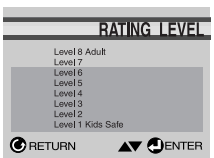

หมายเหตุ

• ถ้าไม่ต้องการให้ SETUP MENU ปรากฏหรือกลับไปยังหน้าจอระหว่างตั้งโปรแกรมให้กดปุ่ม RETURN
• ถ้าลืมรหัสผ่านให้ดูที่ Forget Password ในคู่มือการแก้ปัญหาหน้า 51

การตั้งโปรแกรม **Audio Options**

1 เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP

2 ใช้ปุ่ม UP/DOWN เพื่อเลือก AUDIO OPTIONS แล้วกดปุ่ม ENTER

3 ใช้ปุ่ม UP/DOWN เพื่อเลือกสิ่งที่ต้องการแล้วกดปุ่ม LEFT/RIGHT

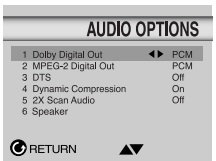

❶ DOLBY DIGITAL OUT

1. PCM : เปลี่ยนเป็นระบบเสียง PCM[2CH]48kHz/16Bit. เลือก PCM เมื่อใช้สัญญาณเสียง AnalogAudioOutput
2. BITSTREAM : เปลี่ยนเป็น DigitalBISTREAM[5.1CH] เลือก BITSTREAM เมื่อใช้สัญญาณเสียง DigitalAudio Output

หมายเหตุ : ต้องแน่ใจว่าเลือกสัญญาณ Digital Output ถูกต้องมิฉะนั้นจะไม่มีเสียง

❷ MPEG-2 DIGITAL OUT

1. PCM : เปลี่ยนเป็นระบบเสียง PCM[2CH] 48kHz/16 Bit. เลือก PCM เมื่อใช้สัญญาณเสียง Analog Audio Output
2. BITSTREAM : เปลี่ยนเป็น Digital BISTREAM[5.1CH] เลือก BITSTREAM เมื่อใช้สัญญาณเสียง Digital Audio Output

❸ DTS

1. OFF : ห้ามใช้สัญญาณดิจิตอล
2. ON : สัญญาณ DTS BITSTREAM ใช้ผ่านสัญญาณดิจิตอลเท่านั้น

❹ DYNAMIC COMPRESSION

1. ON : เพื่อเลือก Dynamic Compression
2. OFF : เพื่อเลือกระดับปกติ

❺ 2X SCAN AUDIO

1. OFF : ปิด 2Xaudio เมื่อตั้งโปรแกรม ON ใน SETUP MENU สำหรับ 2X SCAN AUDIO จะไม่มีเสียง ถ้าแผ่นดิสก์นั้นบันทึกด้วยระบบ LPCM, DTS หรือ MPEG-2
2. ON : เปิด 2Xaudio

❻ Speaker (เฉพาะรุ่น DVD-S428K)

หมายเหตุ

• ถ้าต้องการลบ SETUP MENU หรือกลับไปยังหน้าจอระหว่างตั้งโปรแกรมให้กดปุ่ม RETURN
• การผลิตภายใต้ลิขสิทธิ์ของ Dolby Laboratories จะมีสัญลักษณ์ 'Dolby' และ double-D [DD] เป็นเครื่องหมายการค้า
• 'DTS' และ 'DTS Digital Out' เป็นเครื่องหมายการค้าของ Digital Theater System, Inc.

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 48

การติดตั้งระบบเสียงรอบทิศทางของลำโพง
(เฉพาะรุ่น DVD-S428K)

1 กดปุ่ม SETUP ขณะที่อยู่ใน Play mode หรือ Stop mode

2 กดปุ่ม UP/DOWN เพื่อเลือก AUDIO OPTION แล้วกดปุ่ม ENTER

3 ใช้ปุ่ม UP/DOWN เพื่อเลือก SPEAKER SETUP แล้วกดปุ่ม ENTER
(หรือกดปุ่มSPEAKERที่รีโมท

4 ใช้ปุ่ม UP/DOWN หรือ LEFT/RIGHT เพื่อเลือกรายการที่ต้องการ แล้วกดปุ่ม ENTER.

ตั้งโหมดลำโพง

- ถ้าระบบการทำงานของท่านเชื่อมกับลำโพงที่มีความถี่ต่ำกว่า 100 Hz ให้เลือก Found (แสดงเป็นตัวใหญ่ให้เห็น)
- ถ้าระบบการทำงานของท่านเชื่อมกับลำโพงโดยไม่มีความถี่ต่ำกว่า 100 Hz ให้เลือก Found (แสดงเป็นตัวเล็กให้เห็น) หากไม่เชื่อมซับวูบเปอร์ให้เลือก Found (แสดงเป็นตัวใหญ่ให้เห็น) สำหรับลำโพงข้างหน้า (L/R)
- ถ้าท่านไม่มีลำโพงพิเศษให้เลือก Not Found (ไม่มีแสดงให้เห็น)

การติดตั้งหน่วงเวลา

- เมื่อเล่นเสียงช่อง 5.1 เซอร์ราวด์ ท่านสามารถบันเทิงเสียงดีที่สุดหากระยะห่างระหว่างท่านและลำโพงเท่ากันท่านสามารถตั้งการหน่วงเวลาในลำโพงกลาง/รอบทิศทางให้เป็น ได้ตามความชอบเพื่อรับฟังเสียงในห้องอย่างมีประสิทธิภาพ
- การตั้งลำโพงกลางหากระยะห่างหรือความใกล้ Dc เท่ากันหรือยาวกว่าระยะห่าง Df ในรูปข้างบนมือให้ตั้ง โหมดเป็น Oms หรือเปลี่ยนการติดตั้งดังตารางข้างล่าง

(A) = Df - Dc

ระยะห่าง(A)(in)	การติดตั้ง(ms)
0.00	0
0.34	1
0.68	2
1.02	3
1.36	4
1.70	5

- การติดตั้งลำโพงรอบทิศทาง หากระยะห่าง Dc เท่ากับระยะห่าง Df ดังรูปข้างบนนี้ให้ตั้งโหมดเป็น Omsหรือเปลี่ยนการติดตั้งดังตารางข้างล่าง

(B) = Df - Ds

ระยะห่าง(A)(in)	การติดตั้ง(ms)
1.02	3
2.04	6
3.06	9
4.08	12
5.10	15

การติดตั้งทดสอบ

สัญญาณเอ้าท์พุทของการทดสอบจะเดินตามเข็มนาฬิกา ซึ่งเริ่มจากลำโพงหน้า (ซ้าย) ปรับช่องให้เข้ากับระดับเสียงของสัญญาณทดสอบที่ได้บันทึกไว้ของระบบการทำงาน

หน้า(ซ้าย) ⟶ กลาง ⟶ หน้า (ขวา) ⟶ ซับวูฟเฟอร์ ⟶ รอบทิศทาง (ขวา) ⟶ รอบทิศทาง (ซ้าย)

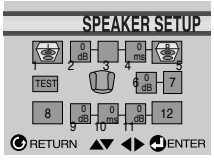

1. Speaker Mode(Front L)
2. Channel Balance(Center)OdB
3. Speaker Mode(Center)
4. Delay Time(Center)Oms
5. Speaker Mode(Front R)
6. Channel Balance(Subwoofer)OdB
7. Speaker Mode(Subwoofer)
8. Speaker Mode(Surround L)
9. Channel Balance(Surround L)OdB
10. Delay Time(Surround L/R)Oms
11. Channel Balance(Surround R)OdB
12. Speaker Mode(Surround R)

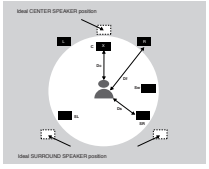

หมายเหตุ

การลบ **SETUP MENU** จากหน้าจอ หรือการกลับไปสู่ **menu** หน้าจอในขณะที่ตั้งโปรแกรม

กดปุ่ม RETURN

- สัญญาณเสียงต่ำ (subwoofer) ที่ทดสอบ จะต่ำกว่าลำโพงตัวอื่นๆ
- สัญลักษณ์ MPEG Multichannel เป็นเครื่องหมายการค้าซึ่งจดทะเบียนไว้โดย PHILIPS Corporation

TH

การตั้งโปรแกรม **Display Options**

1 เมื่ออยู่ในโหมด STOP กดปุ่ม SETUP

2 ใช้ปุ่ม UP/DOWN เพื่อเลือก DISPLAY OPTION และกดปุ่ม ENTER

3 ใช้ปุ่ม UP/DOWN เพื่อเลือกสิ่งที่ต้องการแล้วกดปุ่ม LEFT/RIGHT

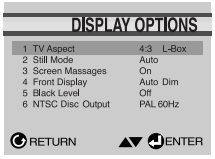

❶ ขนาดของเครื่องรับโทรทัศน์ที่ต่อกับเครื่องรับโทรทัศน์ของท่านถูกควรตั้งค่าของภาพ

1. 4 : 3 LETTER BOX
ถึงแม้จะเป็นเครื่องรับโทรทัศน์ที่มีขนาดหน้าจออัตราส่วน 4 : 3 ก็สามารถเลือกโปรแกรม 4 : 3 LETTER BOX เพื่อดูสิ่งที่เครื่องเล่น DVD เล่นสำหรับหน้าจอ 16 : 9 ได้ จะมีแถบสีดำอยู่ด้านบนและด้านล่างของจอ

2. 4 : 3 PAN-SCAN
เลือกโปรแกรมนี้สำหรับเครื่องรับโทรทัศน์ที่มีขนาดหน้าจอธรรมดา เมื่อต้องการชมเฉพาะส่วนกลางภาพที่ DVD เล่นสำหรับหน้าจอขนาด 16 : 9 (ภาพด้านขวาสุดและซ้ายสุด จะถูกตัดออกไป)

3. 16 : 9 WIDE :
สามารถชมภาพที่มีอัตราส่วน 16 : 9 ได้เต็มภาพ ถ้าใช้เครื่องรับโทรทัศน์ชนิดจอกว้าง (widescreen TV.)

❷ **STILL MODE**
ป้องกันภาพสั่นไหวและแสดงข้อความให้เลือกเพื่อทำให้ภาพชัดเจนขึ้น
1. FIELD : เลือก FIELD เมื่อ AUTO ตั้งค่าสั่ง แล้วภาพยังสั่นไหว
2. FRAME : เลือก FRAME เมื่อตั้งค่าสั่ง AUTO แล้วต้องการให้ตัวอักษรชนิดเส้าชัดเจนขึ้น
3. AUTO : เมื่อเลือก AUTO แล้ว FIELD/FRAME จะถูกเปลี่ยนโดยอัตโนมัติ

❸ **SCREEN MESSAGES**
ใช้เพื่อเปิดหรือปิดโปรแกรม Screen Message

❹ **จอแสดงการทำงาน FRONT DISPLAY**
ใช้ปรับความสว่างของจอแสดงการทำงานด้านหน้าเครื่อง
1. BRIGHT : ทำให้จอแสดงการทำงานด้านหน้าเครื่องสว่างชัดขึ้น
2. DIM : ทำให้จอแสดงการทำงานด้านหน้าเครื่องมีแสงน้อยลง
3. AUTODIM:ทำให้จอแสดงการทำงานด้านหน้าเครื่องมีแสงน้อยลงโดยอัตโนมัติขณะที่กำลังเล่น DVD

❺ **BLACK LEVEL**
ใช้ปรับความสว่างของจอภาพ

❻ **NTSC Disc Output**
"NTSC" หากมีช่องสายเข้า NTSC ช่องเดียวเท่านั้น
หรือไม่ก็ท่านเลือกได้เพื่อออกจาก "PAL 60 Hz"

หมายเหตุ

- เว้นต้องการลบ SETUP MENU หรือกลับไปยังหน้าจอระหว่างตั้งโปรแกรมให้กดปุ่ม RETURN

TH

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 50

การควบคุมโทรทัศน์โดยใช้รีโมท
(เฉพาะรุ่น DVD-S328K/DVD-S428K)

รีโมทสามารถจะควบคุมงานของเครื่องรับโทรทัศน์ส่วนใหญ่สร้างโปรแกรมรีโมทโดยการใช้รหัสที่ตรงกับยี่ห้อของเครื่องท่าน

TV Codes	
CODE	BRAND
01	SAMSUNG_4
02	SAMSUNG_6, LG, LOEWE, PHILIPS, FINLUX, YOKO, LOEWE OPTA, MITSUBISHI, PHONOLA, RADIOLA, SCHNEIDER
03	SAMSUNG_1
04	SAMSUNG_2
05	SAMSUNG_3
06	SAMSUNG_5
07	TOSHIBA
08	PANASONIC_4
09	GRUNDIG, BLAUPUNKT, SIEMENS
10	SHARP
11	HITACHI
12	SANYO, AKAI, FISHER
13	HITACHI, SABA, THOMSON, NORDMENDE
14	HITACHI, NORDMENDE, SABA, TELEFUNKEN, THOMSON, BRANDT, FERGUSON, PIONEER, TELEAVA
15	SONY
16	TOSHIBA, SANYO, SHARP, SONY, MITSUBISHI
17	TOSHIBA, GRUNDIG, FINLUX
18	TOSHIBA
19	TOSHIBA
20	PHILIPS, PHONOLA, RADIOLA
21	TOSHIBA, GRUNDIG, CGE, IMPERIAL, MIVAR
22	PHILIPS, SABA, BANG&OLUFSEN, BRONVEGA, FINLUX, FORMENTI, LOEWE OPTA, METZ, WEGA, PHONOLA, RADIOMARELLI, SINGER, SINUDYNE
23	NOKIA, PANASONIC, SABA, PIONEER, REZ, SELECO, SALORA
24	HITACHI, NORDMENDE, PANASONIC, SABA, TELEFUNKEN, THOMSON, CONTINENTAL, EDISON
25	PANASONIC_2
26	PANASONIC_3
27	PANASONIC_6
28	TELEFUNKEN
29	MIVAL
30	LG_2
31	SHARP_2
32	JVC
33	THOMSON ASIA
34	THOMSON ASIA

1 เปิดเครื่องรับโทรทัศน์

2 เล็งรีโมทของเครื่องเล่น เลเซอร์ดิสก์ยังเครื่อง รับโทรทัศน์

3 ขณะที่กดปุ่มเปิดเครื่อง รับโทรทัศน์ลง ใส่รหัสของยี่ห้อ

e.g สำหรับซัมซุง_4 TVs

ในขณะที่กดปุ่มค้างให้กด 0

4 เมื่อเครื่องรับโทรทัศน์เปิดแสดงว่าติดตั้งเสร็จแล้วใส่รหัสอื่นของยี่ห้อเดียวกันถ้าหากรหัสแรกไม่ทำงาน

5 เพื่อใช้งานเครื่องรับโทรทัศน์ให้อ้างอิง "การใช้ปุ่มฟังก์ชั่นเครื่องรับโทรทัศน์" ในหน้า 17,19

หมายเหตุ

• รีโมทไม่อาจควบคุมงานของเครื่องรับโทรทัศน์ทุกรุ่นได้ที่แสดง ดังตาราง

คู่มือการแก้ปัญหา

กรุณาอ่านคู่มือก่อนเรียกใช้บริการเพื่อแก้ปัญหา

ปัญหาข้อผิดข้อง	การปฏิบัติ	หน้า
ใช้รีโมทแล้วเครื่องไม่ทำงาน	• ตรวจถ่านไฟฉายของรีโมทอาจต้อง เปลี่ยนใหม่ • รีโมทใช้งานได้ในระยะไม่เกิน 20 ฟุต • เอาถ่านไฟฉายออกและกดปุ่มหนึ่งหรือ หลายปุ่มค้างไว้สักครู่ รีโมทจะจัดข้อมูล ภายในใหม่ ใส่ถ่านไฟฉายและลองใช้ อีกครั้ง	P4
แผ่นดิสก์ไม่เล่น	• ต้องแน่ใจว่าใส่แผ่นดิสก์โดยให้ด้านที่มี ป้ายอยู่ด้านบน • ตรวจสอบเลขที่รหัสผลิตภัณฑ์ [Region Number] ของ DVD	P 7
ช่องสัญญาณเสียง 5.1 บันทึกเสียงไม่ได้	• ช่องสัญญาณเสียง 5.1 จะบันทึกเสียงได้ เฉพาะในกรณีต่อไปนี้ 1) เครื่องเล่น DVD ต่อกับเครื่องขยายเสียงที่เหมาะสม ถูกต้อง 2) แผ่นดิสก์บันทึกด้วยช่องสัญญาณเสียง 5.1 • ตรวจสอบดูว่าแผ่นดิสก์ที่ใช้เล่นด้านนอกเขียนว่า "Dolby 5.1 ch" หรือไม่ • ตรวจการต่อเชื่อมระบบเสียงและการทำงานของระบบ ถูกต้องหรือไม่ • ในรายการ SETUP ตั้งออดิโอเข้าที่ทุกไปที่ Bitstream หรือไม่	P 20, P 47~48
เครื่องหมาย ⊘ icon ปรากฏบนหน้าจอ	• สัญญาณหรือการทำงานขณะนั้นไม่สมบูรณ์เพราะ 1. Software ของ DVD กำหนดไว้ 2. Software ของ DVD ไม่ตอบสนองสัญญาณ (เช่น มุมกล้อง) 3. คุณสมบัติดังกล่าวใช้ไม่ได้ 4. มีการเรียกชมเรื่อง [Tittle] หรือหมายเลข Chapter หรือการค้นหาเวลาซึ่งอยู่นอกระบบ	P 23
ไม่ปรากฏ Disc Menu	• ตรวจสอบว่าแผ่นดิสก์มี Menu หรือไม่	P 43~44
คำสั่งเล่นแตกต่างจากการเลือกใน SETUP MENU	• การทำงานด้วยคำสั่งที่ได้เลือกไว้ใน SETUP MENU อาจมีคำปกติถ้าหากว่าแผ่นดิสก์ไม่ได้แปลคำสั่งทำงานให้ตรงกัน	P 43~49
อัตราส่วนหน้าจอเปลี่ยนแปลงไม่ได้	• อัตราส่วนหน้าจอถูกกำหนดด้วย DVDs	P 49
ไม่มีเสียง	• ต้องแน่ใจว่าเลือกสัญญาณดิจิตอลที่ถูกต้องในคำสั่ง Audio Options	P 47~48
ลืมรหัสผ่าน	• กดปุ่มเปิดโดยไม่ต้องมีแผ่นดิสก์แล้วกดปุ่ม STOP และปุ่ม PLAY ที่ด้านหน้าเครื่องพร้อมกันประมาณ 3 นาที จะปรากฏ Select Menu Language บนหน้าจอให้กดปุ่มเลือกภาษากดปุ่ม SETUP ที่รีโมทเพื่อเลือกคำสั่ง Parental ขณะนี้คำสั่งถูกเปิดออกมาแสดงให้เห็น กดปุ่ม DOWN เพื่อเลือกโปรแกรม กด ENTER และรหัสผ่านจะปรากฏขึ้นมาจากนั้น ต้องตั้งระดับการชมและกำหนดรหัสผ่านใหม่	P 46
ถ้ามีปัญหาอื่นๆเกิดขึ้น	• กลับไปดูคำอธิบายวิธีการใช้งานของเครื่องในส่วนที่เกี่ยวกับปัญหานั้นๆ แล้วทำตามขั้นตอนทั้งหมดใหม่ อีกครั้ง • ถ้ายังแก้ปัญหาไม่ได้ให้ติดต่อศูนย์บริการที่ได้รับการแต่งตั้งที่ใกล้ที่สุด	

ภาคผนวก

Downloaded From Disc-Player.com Samsung Manuals

00049E S128/XST (Ta) 11/21/02 3:50 PM Page 52

Memo

ข้อมูลทั่วไป	ระบบไฟ	AC 110~240 V, 50/60 Hz
	อัตราการกินไฟ	13 W
	น้ำหนัก	2.8 Kg
	ขนาด	430mm X 240mm X 79mm
	ช่วงอุณหภูมิ	+5°C ถึง +35°C
	ช่วงความชื้น	10 % ถึง 75 %
แผ่นดิสก์	DVD (DIGITAL VERSATILE DISC)	ความเร็ว : 3.49m/sec. เวลาที่ใช้เล่นสูงสุด (เล่นด้านเดียว : Single Layer Disc) : 135 นาที.
	CD : 12Cm (COMPACT DISC)	ความเร็ว : 1.2 ถึง 1.4m/sec. เวลาที่ใช้เล่นสูงสุด : 74 นาที.
	CD : 8Cm (COMPACT DISC)	ความเร็ว : 1.2 ถึง 1.4m/sec. เวลาที่ใช้เล่นสูงสุด : 20 นาที
	VCD : 12Cm	ความเร็ว : 1.2 ถึง 1.4m/sec. เวลาที่ใช้เล่นสูงสุด : 74นาที [Video และ Audio]
ช่องจ่ายสัญญาณ	Composite Video	1 ช่องทาง : 1.0 Vp-p [75Ω load]
	Component Video	Y : 1.0 Vp-p [75Ω load] Pr : 0.70Vp-p [75Ω load] Pb : 0.70 Vp-p [75Ω load]
	S-VIDEO	ความเข้มของแสง : 1.0 Vp-p [75Ω load] ความเข้มของสี : 0.286 Vp-p [75Ω load]
ช่องจ่ายออดิโอ	2 ช่องทาง	ขวา (1/L) ซ้าย (2/R)
	* การตอบสนองต่อความถี่	48 kHz Sampling : 4 Hz ถึง 22 kHz 96 kHz Sampling : 4 Hz ถึง 44 kHz
	* S/N Ratio	110 dB (DVD-S128/DVD-S228) 105 dB (โหมดคาราโอเกะ ออฟ DVD-S328K/DVD-S428K)
	* ช่วงไดนามิกเรนจ์	100 dB (DVD-S128/DVD-S228) 96 dB (โหมดคาราโอเกะ ออฟ DVD-S328K/DVD-S428K)
	* ความผิดเพี้ยน	0.004% (DVD-S128/DVD-S228) 0.004% (โหมดคาราโอเกะ ออฟ DVD-S328K/DVD-S428K)

* : ข้อมูลจำเพาะทั่วไป

• ข้อมูลจำเพาะอาจมีการเปลี่ยนแปลงได้โดยไม่ได้แจ้งล่วงหน้า
• น้ำหนักและขนาดในข้อมูลจำเพาะโดยประมาณ

Downloaded From Disc-Player.com Samsung Manuals